

03538410

Form P6976
Edition 5
February, 1996F
E
P


OPERATION AND MAINTENANCE MANUAL FOR SERIES DAA TORQUE CONTROL ANGLE WRENCHES

NOTICE

Series DAA Angle Wrenches are designed for assembly applications requiring precise torque monitoring and control, accuracy, consistency and repeatability.

Ingersoll-Rand is not responsible for customer modification of tools for applications on which Ingersoll-Rand was not consulted.

! WARNING

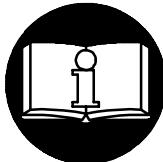

**IMPORTANT SAFETY INFORMATION ENCLOSED.
READ THIS MANUAL BEFORE OPERATING TOOL.**

**IT IS THE RESPONSIBILITY OF THE EMPLOYER TO PLACE THE INFORMATION
IN THIS MANUAL INTO THE HANDS OF THE OPERATOR.**

FAILURE TO OBSERVE THE FOLLOWING WARNINGS COULD RESULT IN INJURY.

PLACING TOOL IN SERVICE

- Always operate, inspect and maintain this tool in accordance with American National Standards Institute Safety Code for Portable Air Tools (ANSI B186.1).
- For safety, top performance, and maximum durability of parts, operate this tool at 90 psig (6.2 bar/620 kPa) maximum air pressure at the inlet with 3/8" (10 mm) inside diameter air supply hose.
- Always turn off the air supply and disconnect the air supply hose before installing, removing or adjusting any accessory on this tool, or before performing any maintenance on this tool.
- Do not use damaged, frayed or deteriorated air hoses and fittings.
- Be sure all hoses and fittings are the correct size and are tightly secured. See Dwg. TPD905-1 for a typical piping arrangement.
- Always use clean, dry air at 90 psig maximum air pressure. Dust, corrosive fumes and/or excessive moisture can ruin the motor of an air tool.
- Do not lubricate tools with flammable or volatile liquids such as kerosene, diesel or jet fuel.
- Do not remove any labels. Replace any damaged label.

USING THE TOOL

- Always wear eye protection when operating or

performing maintenance on this tool.

- Always wear hearing protection when operating this tool.
- Keep hands, loose clothing and long hair away from rotating end of tool.
- Note the position of the reversing lever before operating the tool so as to be aware of the direction of rotation when operating the throttle.
- Anticipate and be alert for sudden changes in motion during start up and operation of any power tool.
- Keep body stance balanced and firm. Do not overreach when operating this tool. High reaction torques can occur at or below the recommended air pressure.
- Tool shaft may continue to rotate briefly after throttle is released.
- Air powered tools can vibrate in use. Vibration, repetitive motions or uncomfortable positions may be harmful to your hands and arms. Stop using any tool if discomfort, tingling feeling or pain occurs. Seek medical advice before resuming use.
- Use accessories recommended by Ingersoll-Rand.
- Use only impact sockets and accessories. Do not use hand (chrome) sockets or accessories.
- This tool is not designed for working in explosive atmospheres.
- This tool is not insulated against electric shock.

NOTICE

The use of other than genuine Ingersoll-Rand replacement parts may result in safety hazards, decreased tool performance, and increased maintenance, and may invalidate all warranties.

Repairs should be made only by authorized trained personnel. Consult your nearest Ingersoll-Rand Authorized Servicenter.

Refer All Communications to the Nearest
Ingersoll-Rand Office or Distributor.

© Ingersoll-Rand Company 1996

Printed in U.S.A.

INGERSOLL-RAND®
PROFESSIONAL TOOLS

WARNING LABEL IDENTIFICATION

! WARNING

FAILURE TO OBSERVE THE FOLLOWING WARNINGS COULD RESULT IN INJURY.

	! WARNING		! WARNING		! WARNING
	Always wear eye protection when operating or performing maintenance on this tool.		Always wear hearing protection when operating this tool.		Always turn off the air supply and disconnect the air supply hose before installing, removing or adjusting any accessory on this tool, or before performing any maintenance on this tool.
	! WARNING		! WARNING		! WARNING
	Air powered tools can vibrate in use. Vibration, repetitive motions or uncomfortable positions may be harmful to your hands and arms. Stop using any tool if discomfort, tingling feeling or pain occurs. Seek medical advice before resuming use.		Do not carry the tool by the hose.		Do not use damaged, frayed or deteriorated air hoses and fittings.
	! WARNING		! WARNING	International Warning Label: Order Part No. _____	
	Keep body stance balanced and firm. Do not overreach when operating this tool.		Operate at 90 psig (6.2 bar/ 620 kPa) Maximum air pressure.		

ADJUSTMENTS

ADJUSTMENTS

Before placing your Ingersoll-Rand Series DAA Torque Control Angle Wrench in service, several optional adjustments can be made to the tool which will enhance the performance of the tool or improve the comfort of the operator. Selection and adjustments should be made prior to placing the tool in service.

TOP/REAR AIR INLET

The air supply hose can be connected conventionally to the rear of the tool or connected to the side of the Handle if an overhead air supply is available. To change the inlet connection, proceed as follows:


! WARNING

Do not remove the Inlet Plug without first disconnecting the live air supply.

CAUTION


Do not thread pipe thread fittings directly into the Inlet Bushing or Inlet Plug locations in the Handle.

1. Disconnect the air supply hose if it is attached to the tool.
2. Using an adjustable wrench, unscrew and remove the Inlet Bushing and Inlet Bushing Seal.
3. Using a 1/4" hex wrench, unscrew and remove the Inlet Plug and Inlet Plug Seal.
4. Install the Inlet Plug and Seal in the desired location and tighten the Plug between 30 and 40 in-lb (3.4 and 4.5 Nm) torque. (Refer to TPD1254).

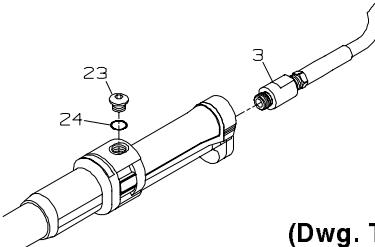

(Dwg. TPD1254)

5. Install the Inlet Bushing and Seal in the desired location and tighten the Plug between 20 and 30 ft-lb (27 and 40 Nm) torque. (Refer to TPD1253)

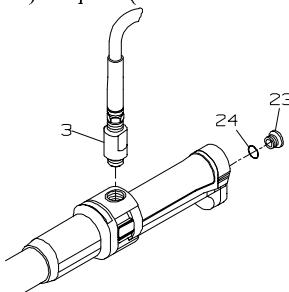

(Dwg. TPD1253)

ANGLE HEAD ORIENTATION

The Gear Case has a notch every thirty degrees in the angle head end which enable the Angle Head to be positioned in the optimum radial location to do the job. To reposition the Angle Head, proceed as follows:

! WARNING

Whenever the Angle Head is installed or repositioned, the Throttle Lever must be positioned so that reaction torque will not tend to retain the throttle in the "ON" position.


ADJUSTMENTS

1. Using a wrench on the hex of the Gear Case and a wrench on the Coupling Nut, loosen but do not remove the Coupling Nut.

NOTICE


This is a left-hand thread. Rotate the Nut clockwise.

2. Apply some pressure against the Angle Head and continue loosening the Coupling Nut until the pin in the Housing Orientation Ring disengages the notch in the Gear Case.
3. Rotate the Angle Head to the desired location and push the Angle Head against the Gear Case making sure the pin in the Orientation Ring engages a notch.
4. Using the wrenches, tighten the Coupling Nut between 25 and 30 ft-lb (27 and 40 Nm) torque.

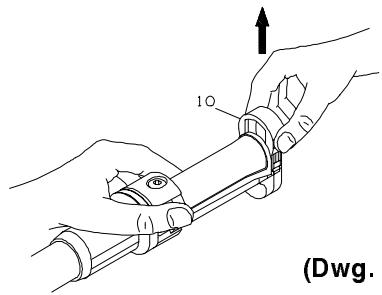


(Dwg. TPD1255)

2. Grasp the Adjustable Grip and slide it rearward until it stops. (Refer to TPD1256).
3. Raise or lower the Grip until the desired grooves inside the Grip align with the appropriate lugs on the Handle. (Refer to TPD1257).

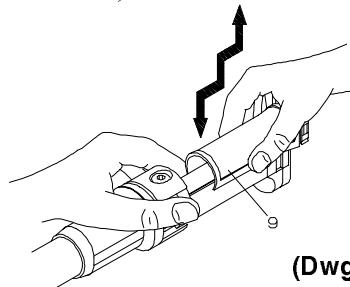


(Dwg. TPD1257)

4. Slide the Grip forward onto the Handle until it butts against the Collar or Collar Assembly. (Refer to TPD1258).

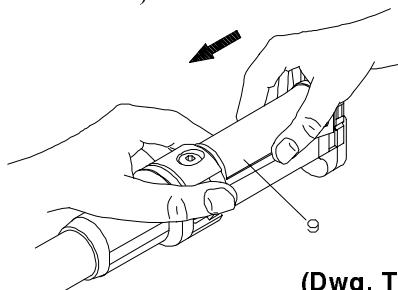

(Dwg. TPD1258)

5. Push the Grip Latch downward to its original position to lock the adjustment into position. (Refer to TPD1259).

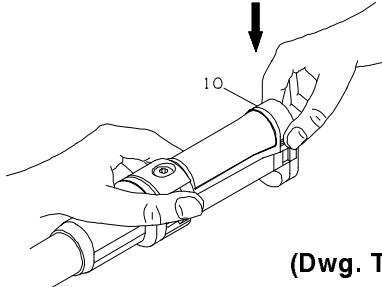

(Dwg. TPD1259)

CLUTCH ADJUSTMENT

To adjust the clutch on these Angle Wrenches, proceed as follows:

1. Rotate the Clutch Adjusting Hole Cover until the slot in the Cover aligns with a corresponding slot in the Motor Housing Assembly.
2. Using a wrench on the square drive spindle or hex bit insert, rotate the output spindle until the half circle notch on the motor end of the Clutch Adjusting Nut Lock is visible in the slot.
3. Insert a #1 Phillips head screwdriver into the notch of the Nut Lock and one of the notches in the Clutch Adjusting Nut. Insert the screwdriver far enough to create a gap between the Nut Lock and Adjusting Nut.
4. Turn the screwdriver clockwise (as you would to tighten a screw) to increase the clutch torque or counter-clockwise to decrease the clutch torque.
5. Final clutch adjustment should be set on the job.

GRIP ADJUSTMENT

The Handle of the Angle Wrench has an Adjustable Grip which permits individual operators to select one of three handle thickness positions. Operators with large hands can select the bulkiest position and operators with small hands can select the smallest size. To adjust the Grip, proceed as follows:

1. Grasp the grooved ends of the Adjustable Grip Latch, and spreading the ends slightly, raise the Latch to its uppermost position. (Refer to TPD1255).

PLACING TOOL IN SERVICE

LUBRICATION



Ingersoll-Rand No. 50

Ingersoll-Rand No. 100

Adequate lubrication is imperative for maximum performance and durability of the gearing in these tools.

We recommend the following Filter-Lubricator-Regulator Unit:

For USA - No. C11-03-G00


For International - No. C16-C3-A29

After each eight hours of operation, unless an air line lubricator is used, inject 2 cc of Ingersoll-Rand No. 10 Oil into the Inlet Bushing.

After each 50 000 cycles, or one month of operation, inject 3 to 4 cc of Ingersoll-Rand No. 67 Grease into the Grease Fitting in the Gear Case Assembly.

After each eight hours of operation, inject 1 to 2 cc of Ingersoll-Rand No. 67 Grease into the Grease Fitting in the Angle Housing Assembly.

After each eight hours of operation, inject 1 to 2 cc of Ingersoll-Rand No. 67 Grease into the Grease Fitting in the Angle Housing Assembly.

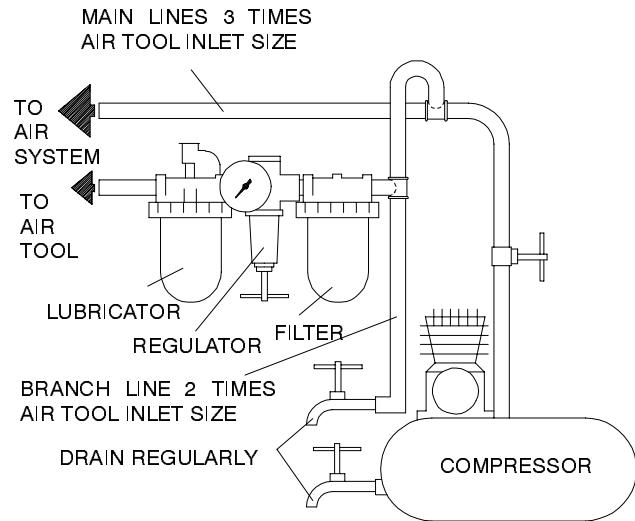

(Dwg. TPD905-1)

MANUAL AND VIDEO AVAILABLE

"Ergonomics: Design for a Better Workplace" (Manual)
Form No. 52070

"Ergonomics: Design for a Better Workplace" (Video)
Form No. VCR-100

POSTERS AVAILABLE

Ergonomics Poster - Series #2
Form No. 52109

Ergonomics Poster - Series #1
Form No. 52108

NEWSLETTERS AVAILABLE


"Ergonomics: Interactive Human Engineering" - Edition 1
Form No. 52094

"Ergonomics: Interactive Human Engineering" - Edition 3
Form No. 52094B

"Ergonomics: Interactive Human Engineering" - Edition 2
Form No. 52094A

To receive any of the above listed ergonomic informational items, contact:

ERGONOMICS
c/o INGERSOLL-RAND COMPANY
PO BOX 1776
LIBERTY CORNER, NJ 07938

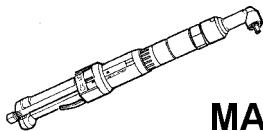

F


MANUEL D'EXPLOITATION ET D'ENTRETIEN DES CLÉS D'ANGLE DYNAMOMÉTRIQUES DE LA SÉRIE DAA

NOTE

Les Clés d'angle de la série DAA sont destinées aux opérations d'assemblage nécessitant un contrôle et une application précise, constante et répétable du couple de serrage.

Ingersoll-Rand ne peut être tenu responsable de la modification des outils par le client pour les adapter à des applications qui n'ont pas été approuvées par Ingersoll-Rand.

! ATTENTION

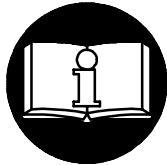

D'IMPORTANTES INFORMATIONS DE SÉCURITÉ SONT JOINTES.

LIRE CE MANUEL AVANT D'UTILISER L'OUTIL.

L'EMPLOYEUR EST TENU DE COMMUNIQUER LES INFORMATIONS
DE CE MANUEL AUX EMPLOYÉS UTILISANT CET OUTIL.

LE NON RESPECT DES AVERTISSEMENTS SUIVANTS PEUT CAUSER DES BLESSURES.

MISE EN SERVICE DE L'OUTIL

- Toujours exploiter, inspecter et entretenir cet outil conformément au Code de sécurité des outils pneumatiques portatifs de l'American National Standards Institute (ANSI B186.1).
- Pour la sécurité, les performances optimales et la durabilité maximale des pièces, cet outil doit être connecté à une alimentation d'air comprimé de 6,2 bar (620 kPa) maximum à l'entrée, avec un flexible de 10 mm de diamètre intérieur.
- Couper toujours l'alimentation d'air comprimé et débrancher le flexible d'alimentation avant d'installer, déposer ou ajuster tout accessoire sur cet outil, ou d'entreprendre une opération d'entretien quelconque sur l'outil.
- Ne pas utiliser des flexibles ou des raccords endommagés, effilochés ou détériorés.
- S'assurer que tous les flexibles et les raccords sont correctement dimensionnés et bien serrés. Voir Plan TPD905-1 pour un exemple type d'agencement des tuyauteries.
- Utiliser toujours de l'air sec et propre à une pression maximum de 6,2 bar. La poussière, les fumées corrosives et/ou une humidité excessive peuvent endommager le moteur d'un outil pneumatique.
- Ne jamais lubrifier les outils avec des liquides inflammables ou volatiles tels que le kérozène, le gasoil ou le carburant d'aviation.
- Ne retirer aucune étiquette. Remplacer toute étiquette endommagée.

UTILISATION DE L'OUTIL

- Porter toujours des lunettes de protection pendant

l'utilisation et l'entretien de cet outil.

- Porter toujours une protection acoustique pendant l'utilisation de cet outil.
- Tenir les mains, les vêtements flous et les cheveux longs, éloignés de l'extrémité rotative de l'outil.
- Noter la position du levier d'inversion avant de mettre l'outil en marche de manière à savoir dans quel sens il va tourner lorsque la commande est actionnée.
- Prévoir, et ne pas oublier, que tout outil motorisé est susceptible d'à-coups brusques lors de sa mise en marche et pendant son utilisation.
- Garder une position équilibrée et ferme. Ne pas se pencher trop en avant pendant l'utilisation de cet outil. Des couples de réaction élevés peuvent se produire à, ou en dessous, de la pression d'air recommandée.
- La rotation des accessoires de l'outil peut continuer pendant un certain temps après le relâchement de la gâchette.
- Les outils pneumatiques peuvent vibrer pendant l'exploitation. Les vibrations, les mouvements répétitifs et les positions inconfortables peuvent causer des douleurs dans les mains et les bras. N'utiliser plus d'outils en cas d'inconfort, de picotements ou de douleurs. Consulter un médecin avant de recommencer à utiliser l'outil.
- Utiliser les accessoires recommandés par Ingersoll-Rand.
- N'utiliser que les douilles et les accessoires pour clés à chocs. Ne pas utiliser les douilles et accessoires (chromés) de clés manuelles.
- Cet outil n'est pas conçu pour fonctionner dans des atmosphères explosives.
- Cet outil n'est pas isolé contre les chocs électriques.

NOTE

L'utilisation de rechanges autres que les pièces d'origine Ingersoll-Rand peut causer des risques d'insécurité, réduire les performances de l'outil et augmenter l'entretien, et peut annuler toutes les garanties.

Les réparations ne doivent être effectuées que par des réparateurs qualifiés autorisés. Consultez votre Centre de Service Ingersoll-Rand le plus proche.

Adressez toutes vos communications au Bureau Ingersoll-Rand ou distributeur le plus proche.

© Ingersoll-Rand Company 1996

 
Imprimé aux É.U.

INGERSOLL-RAND®
PROFESSIONAL TOOLS

SIGNIFICATION DES ÉTIQUETTES D'AVERTISSEMENT

ATTENTION

LE NON RESPECT DES AVERTISSEMENTS SUIVANTS PEUT CAUSER DES BLESSURES.

	ATTENTION Porter toujours des lunettes de protection pendant l'utilisation et l'entretien de cet outil.
	ATTENTION Porter toujours une protection acoustique pendant l'utilisation de cet outil.
	ATTENTION Couper toujours l'alimentation d'air comprimé et débrancher le flexible d'alimentation avant d'installer, déposer ou ajuster tout accessoire sur cet outil, ou d'entreprendre une opération d'entretien quelconque sur l'outil.
	ATTENTION Les outils pneumatiques peuvent vibrer pendant l'exploitation. Les vibrations, les mouvements répétitifs et les positions inconfortables peuvent causer des douleurs dans les mains et les bras. N'utiliser plus d'outils en cas d'inconfort, de picotements ou de douleurs. Consulter un médecin avant de recommencer à utiliser l'outil.
	ATTENTION Garder une position équilibrée et ferme. Ne pas se pencher trop en avant pendant l'utilisation de cet outil.
	ATTENTION Utiliser de l'air comprimé à une pression maximum de 6,2 bar (620 kPa).
Étiquette d'avertissement internationale: Commander Pièce No.	
	

RÉGLAGES

RÉGLAGES

Avant de mettre votre clé d'angle dynamométrique Ingersoll-Rand série DAA-EU en service, plusieurs réglages optionnels peuvent être effectués sur l'outil pour améliorer les performances de l'outil et le confort de l'opérateur. La sélection et les réglages doivent être effectués avant la mise en service de l'outil.

ADMISSION D'AIR SUPÉRIEURE/ARRIÈRE

Le flexible d'alimentation d'air comprimé peut être connecté traditionnellement à l'arrière de l'outil ou sur le côté de la poignée si une alimentation d'air comprimé suspendue est disponible. Pour changer la connexion d'admission d'air, procéder comme suit :


ATTENTION

Débrancher l'alimentation d'air comprimé avant de déposer le bouchon d'admission.

AVERTISSEMENT


Ne pas visser les raccords de tuyauterie directement dans le raccord d'admission ou dans le bouchon d'admission de la poignée.

1. Débrancher le flexible d'alimentation d'air comprimé s'il est attaché à l'outil.
2. Utiliser une clé à molette pour dévisser et déposer le raccord d'admission et son joint.
3. Utiliser une clé hexagonale de 1/4" pour dévisser et déposer le bouchon d'admission et son joint.
4. Monter le bouchon d'admission et son joint à la position requise et serrer le bouchon à un couple de 3,4 à 4,5 Nm. (Voir TPD1254).

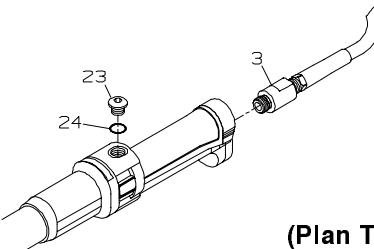

(Plan TPD1254)

5. Monter le raccord d'admission et son joint à la position requise et serrer le raccord à un couple de 27 à 40 Nm. (Voir TPD1253).

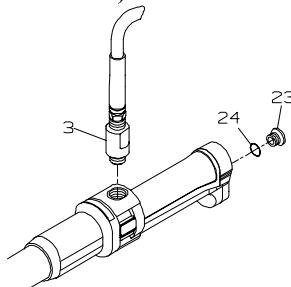

(Plan TPD1253)

— ORIENTATION DU RENVOI D'ANGLE —

L'extrémité renvoi d'angle du boîtier d'engrenages comporte une encoche tous les 30 degrés pour permettre le positionnement radial le mieux adapté à la tâche. Pour changer la position du renvoi d'angle, procéder comme suit :

ATTENTION

A chaque fois que le renvoi d'angle est installé ou reposé, le levier de commande doit être positionné de manière à ce que le couple de réaction n'ait pas tendance à maintenir le levier de commande en position "MARCHE".

RÉGLAGES


1. Utiliser une clé sur l'hexagone du boîtier d'engrenages et une clé sur l'écrou d'accouplement, et desserer l'écrou d'accouplement, mais ne pas le déposer.

NOTE

Ce filetage a un pas à gauche. Tourner l'écrou dans le sens des aiguilles d'une montre.


2. Appliquer une certaine pression sur le renvoi d'angle et continuer à desserer l'écrou d'accouplement jusqu'à ce que la broche de la bague d'orientation du corps se dégage de l'encoche du boîtier d'engrenages.
3. Tourner le renvoi d'angle à la position désirée et pousser le renvoi d'angle contre le boîtier d'engrenages en vérifiant que la broche de la bague d'orientation s'engage bien dans une encoche.
4. Utiliser les clés et serrer l'écrou d'accouplement à un couple de 27 à 40 Nm.

1. Saisir les extrémités cannelées du verrou de poignée réglable et en écartant légèrement les extrémités, soulever le verrou jusqu'à sa position haute. (Voir TPD1255).

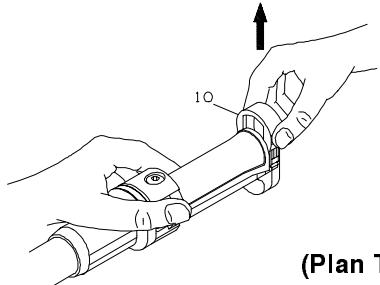


(Plan TPD1255)

2. Saisir la poignée réglable et la tirer à fond en arrière. (Voir TPD1256).
3. Soulever ou abaisser la poignée jusqu'à ce que les cannelures désirées à l'intérieur de la poignée soient alignées sur les bossages appropriés de la poignée. (Voir TPD1257).

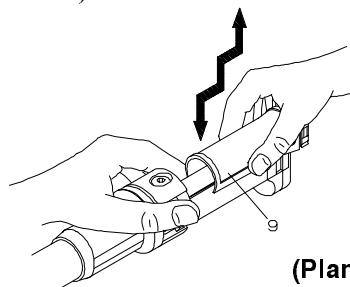


(Plan TPD1257)

4. Coulisser la poignée avant jusqu'à ce qu'elle vienne en butée contre le collier ou l'ensemble de collier. (Voir TPD1258).

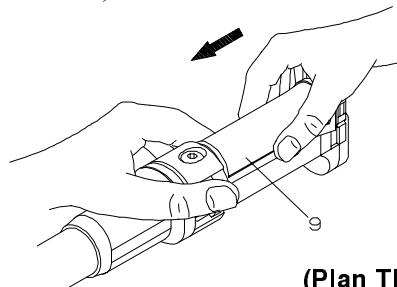

(Plan TPD1258)

5. Pousser le verrou de poignée vers le bas à sa position d'origine pour verrouiller le réglage en position. (Voir TPD1259).

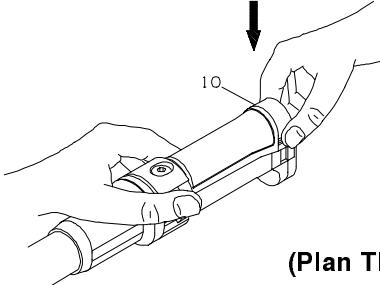

(Plan TPD1259)

RÉGLAGE DU LIMITEUR

Pour régler le limiteur sur ces Clés d'angle, procéder comme suit :

1. Tourner le couvercle du trou de réglage du limiteur jusqu'à ce que la rainure du couvercle soit alignée avec la rainure correspondante du corps du moteur.
2. Utiliser une clé sur la broche à entraîneur carré ou le porte-embout hexagonal, tourner la broche de sortie jusqu'à ce que l'encoche en demi-cercle sur le côté moteur de l'écrou de réglage du limiteur soit visible dans la rainure.
3. Insérer un tournevis Phillips dans l'encoche de l'écrou de blocage et dans l'une des encoches de l'écrou de réglage du limiteur. Pousser suffisamment le tournevis pour créer un espace entre l'écrou de blocage et l'écrou de réglage.
4. Tourner le tournevis dans le sens des aiguilles d'une montre (comme pour serrer une vis) pour augmenter le couple du limiteur, ou dans le sens inverse des aiguilles d'une montre pour réduire le couple.
5. Le réglage final du limiteur doit être effectué sur le travail lui-même.

RÉGLAGE DE LA POIGNÉE

La poignée de la clé d'angle a une partie réglable qui permet à l'opérateur de choisir une des trois positions d'épaisseur de poignée. Les opérateurs ayant de grandes mains peuvent choisir la plus grosse position, tandis que ceux ayant de petites mains peuvent choisir la plus mince. Pour régler la poignée, procéder comme suit :

MISE EN SERVICE DE L'OUTIL

LUBRIFICATION



Ingersoll-Rand N°. 50

Ingersoll-Rand N°. 100

Une lubrification adéquate est absolument impérative sur ces outils pour obtenir les performances et la durabilité maximales des pignons. Utiliser toujours un lubrificateur avec cet outil.

Nous recommandons l'emploi du filtre-régulateur-lubrificateur suivant :


No. C11-03-G00


No. C16-C3-A29

Toutes les huit heures de fonctionnement, si un lubrificateur de ligne n'est pas utilisé, injecter 2 cm³ d'huile Ingersoll-Rand No. 10 dans le raccord d'admission de l'outil.

Tous les 50 000 cycles, ou une fois par mois, injecter 3 à 4 cm³ de graisse Ingersoll-Rand No. 67 dans le raccord de graissage de l'ensemble de boîtier d'engrenages.

Toutes les huit heures de fonctionnement, injecter 1 à 2 cm³ de graisse Ingersoll-Rand No. 67 dans le raccord de graissage de l'ensemble de corps de renvoi.

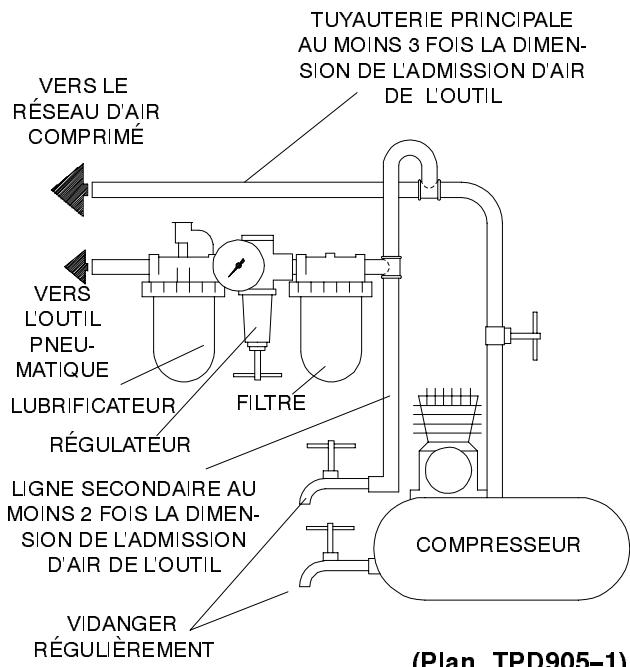

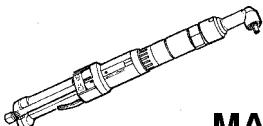


MANUAL DE USO Y MANTENIMIENTO PARA LLAVES ANGULARES DE CONTROL DE PAR DE LA SERIE DAA

NOTA

Las llaves angulares de la serie DAA están diseñadas para aplicaciones de montaje que requieren un control y seguimiento de par preciso, exactitud, consistencia y repetibilidad.

Ingersoll-Rand no aceptará responsabilidad alguna por la modificación de las herramientas efectuada por el cliente para las aplicaciones que no hayan sido consultadas con Ingersoll-Rand.

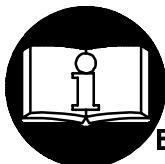

AVISO

SE ADJUNTA INFORMACIÓN IMPORTANTE DE SEGURIDAD.

LEA ESTE MANUAL ANTES DE UTILIZAR LA HERRAMIENTA.

ES RESPONSABILIDAD DE LA EMPRESA ASEGURARSE DE QUE EL OPERARIO ESTÉ AL TANTO DE LA INFORMACIÓN QUE CONTIENE ESTE MANUAL.

EL HACER CASO OMISO DE LOS AVISOS SIGUIENTES PODRÍA OCASIONAR LESIONES.

PARA PONER LA HERRAMIENTA EN SERVICIO

- Utilice, examine y mantenga siempre esta herramienta conforme al código de seguridad para herramientas neumáticas portátiles de la American National Standards Institute (ANSI B186.1).
- Para mayor seguridad, rendimiento óptimo y larga vida útil de las piezas, utilice esta herramienta a una presión de aire máxima de 90 psig (6,2 bar/620 Pa) con una manguera de suministro de aire con diámetro interno de 10 mm.
- Corte siempre el suministro de aire y desconecte la manguera de suministro de aire antes de instalar, desmontar o ajustar cualquier accesorio de esta herramienta, o antes de realizar cualquier operación de mantenimiento de la misma.
- No utilice mangueras de aire y racores dañados, desgastados o deteriorados.
- Asegúrese de que todos los racores y mangueras sean del tamaño correcto y estén bien apretados. El Esq. TPD905-1 muestra una disposición característica de las tuberías.
- Use siempre aire limpio y seco a una presión máxima de 90 psig (6,2 bar/620 kPa). El polvo, los gases corrosivos y el exceso de humedad pueden estropear el motor de una herramienta neumática.
- No lubrique las herramientas con líquidos inflamables o volátiles tales como queroseno, gasoil o combustible para motores a reacción.
- No saque ninguna etiqueta. Sustituya toda etiqueta dañada.

UTILIZACIÓN DE LA HERRAMIENTA

- Lleve siempre protección ocular cuando utilice esta herramienta o realice operaciones de mantenimiento en la misma.

- Lleve siempre protección para los oídos cuando utilice esta herramienta.
- Mantenga las manos, la ropa suelta y el cabello largo alejados del extremo giratorio de la herramienta.
- Tome nota de la posición de la palanca de inversión antes de hacer funcionar la herramienta para tener en cuenta el sentido de rotación al accionar el estrangulador.
- Antípese y esté atento a los cambios repentinos en el movimiento durante la puesta en marcha y utilización de toda herramienta motorizada.
- Mantenga una postura del cuerpo equilibrada y firme. No estire demasiado los brazos al manejar la herramienta. Pueden darse elevados pares de reacción a la presión de aire recomendada, e incluso a presiones inferiores.
- El eje de la herramienta puede seguir girando brevemente después de haberse soltado el mando.
- Las herramientas neumáticas pueden vibrar durante el uso. La vibración, los movimientos repetitivos o las posiciones incómodas pueden dañarle los brazos y manos. En caso de incomodidad, sensación de hormigueo o dolor, deje de usar la herramienta. Consulte con el médico antes de volver a utilizarla.
- Utilice únicamente los accesorios Ingersoll-Rand recomendados.
- Utilice únicamente bocas y accesorios para llaves de impacto. No utilice bocas o accesorios manuales (cromados).
- Esta herramienta no ha sido diseñada para trabajar en ambientes explosivos.
- Esta herramienta no está aislada contra descargas eléctricas.

NOTA

El uso de piezas de recambio que no sean las auténticas piezas Ingersoll-Rand puede poner en peligro la seguridad, reducir el rendimiento de la herramienta y aumentar los cuidados de mantenimiento necesarios, así como invalidar toda garantía.

Las reparaciones sólo se deben encomendar a personal debidamente cualificado y autorizado. Consulte con el centro de servicio autorizado Ingersoll-Rand más próximo.

Toda comunicación se deberá dirigir a la oficina o al distribuidor Ingersoll-Rand más próximo.

© Ingersoll-Rand Company 1996




Impreso en EE. UU.

INGERSOLL-RAND®
PROFESSIONAL TOOLS

ETIQUETAS DE AVISO

AVISO

EL HACER CASO OMISO DE LOS AVISOS SIGUIENTES PODRÍA OCASIONAR LESIONES.

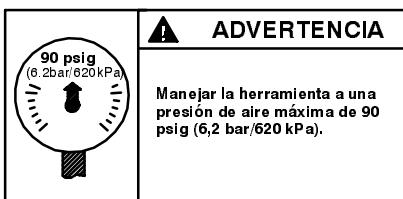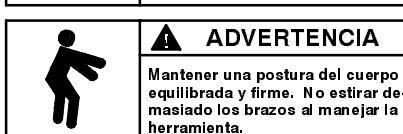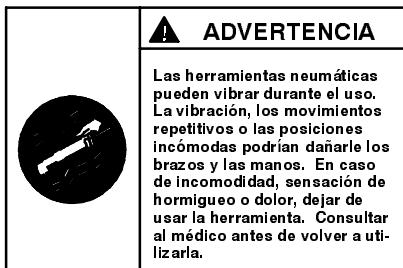

AJUSTES

AJUSTES

Antes de poner en funcionamiento la llave angular de control de par Ingersoll-Rand de la serie DAA, se pueden llevar a cabo una serie de ajustes opcionales que mejoraran el funcionamiento de la herramienta o la comodidad del operario. Toda selección y ajuste ha de llevarse a cabo antes de poner la herramienta en funcionamiento.

ADMISIÓN DE AIRE SUPERIOR/TRASERA

La manguera de suministro de aire se puede conectar de manera convencional a la parte trasera de la herramienta, o al lado de la empuñadura si está disponible un suministro de aire elevado. Para cambiar la conexión de la admisión, proceda como sigue:


AVISO

No saque el tapón de admisión sin desconectar primero el suministro de aire comprimido.

PRECAUCIÓN


No enrosque accesorios de rosca de tubería directamente en las ubicaciones para el casquillo o el tapón de la admisión situados en la empuñadura.

- Desconecte la manguera de suministro de aire comprimido si estuviera conectada a la herramienta.
- Utilizando una llave ajustable, desenrosque y saque el casquillo y el retén del casquillo de la admisión.
- Con una llave hexagonal de 1/4 pulg., desenrosque y saque el tapón y el retén del tapón de la admisión.
- Instale el tapón de la admisión y el retén en el lugar deseado, y apriete el tapón entre 30 y 40 pulg.-lb (3,4 y 4,5 Nm) de par. (Consulte TPD1254).

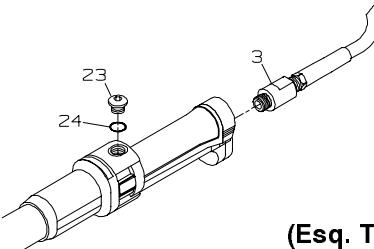

(Esq. TPD1254)

- Instale el casquillo de la admisión y el retén en el lugar deseado, y apriete el tapón entre 20 y 30 pulg.-lb (27 y 40 Nm) de par. (Consulte TPD1253).

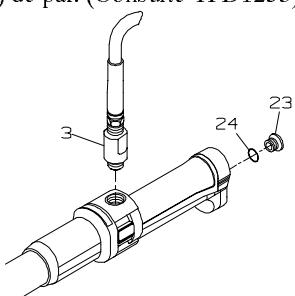

(Esq. TPD1253)

ORIENTACIÓN DE LA CABEZA ANGULAR

La caja de engranajes presenta una ranura cada treinta grados en el extremo de la cabeza angular, que permiten que se coloque dicha cabeza angular en el lugar radial más indicado para el trabajo que se vaya a realizar. Para volver a colocar la cabeza angular, proceda como sigue:

AVISO

Cuando se instale o reposicione la cabeza angular, la palanca de mando deberá colocarse de forma que la reacción de par no tienda a retener el mando en la posición de "ON" (ACCIONAMIENTO).

AJUSTES


- Utilizando una llave en el hexágono de la caja de engranajes, y otra llave en la tuerca de acoplamiento, afloje dicha tuerca, pero no la saque.

NOTA

Se trata de una rosca hacia la izquierda. Gire la tuerca hacia la derecha.


- Aplique cierta presión contra la cabeza angular y continúe aflojando la tuerca de acoplamiento hasta que el pasador situado en el anillo de orientación de la carcasa se suelte de la muesca de la caja de engranajes.
- Gire la cabeza angular hasta obtener la posición deseada, y empújela contra la caja de engranajes, asegurándose de que el pasador situado en el anillo de orientación se enganche en la muesca.
- Utilizando las llaves, apriete la tuerca de acoplamiento entre 25 y 30 ft-lb (27 a 40 Nm) de par.

- Sujete los extremos acanalados del enganche de la empuñadura ajustable y, separando ligeramente los extremos, levante el enganche hasta su posición más elevada. (Consulte TPD1255).

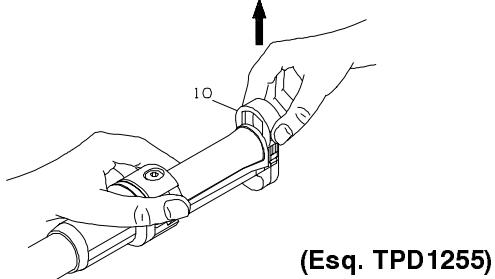


(Esq. TPD1255)

- Sujete la empuñadura ajustable y deslícela hacia atrás hasta que se pare. (Consulte TPD1256).
- Levante o baje la empuñadura hasta conseguir que las ondulaciones deseadas se alineen con los salientes correspondientes situados en el mango. (Consulte TPD1257).

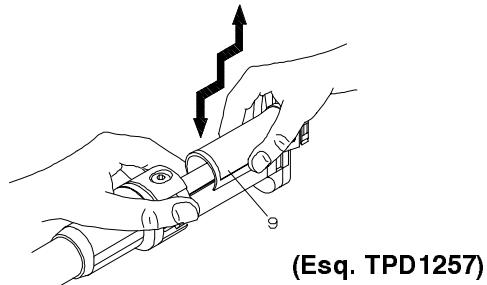


(Esq. TPD1257)

- Deslice la empuñadura hacia delante, sobre el mango, hasta que tropiece con la pinza o el conjunto de la pinza. (Consulte TPD1258).

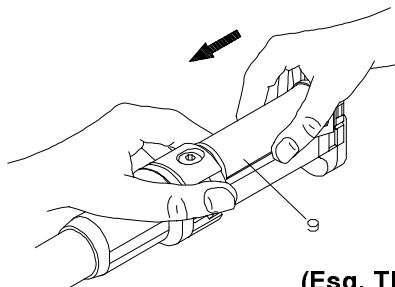

(Esq. TPD1258)

- Empuje el enganche de la empuñadura hacia abajo, hasta su posición original, para asegurar el ajuste en su posición. (Consulte TPD1259).

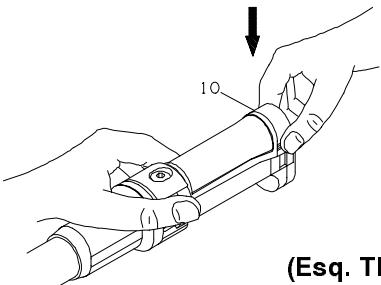

(Esq. TPD1259)

— AJUSTE DEL EMBRAGUE —

Para ajustar el embrague de estas llaves angulares, proceda como sigue:

- Gire la cubierta del orificio de ajuste del embrague hasta que la ranura situada en la cubierta se alinee con una ranura correspondiente en el conjunto de la carcasa del motor.
- Utilizando una llave en el inserto de la broca hexagonal o el husillo cuadrado, gire el husillo de salida hasta que la muesca semicircular del extremo del motor del tope de la tuerca de ajuste del embrague quede a la vista en la ranura.
- Introduzca un destornillador Phillips en la muesca del tope de la tuerca y una de las muescas de la tuerca de ajuste del embrague. Introduzca el destornillador lo suficiente como para que quede un hueco entre el tope de la tuerca y la tuerca de ajuste.
- Gire el destornillador hacia la derecha (como para apretar un tornillo) para aumentar el par del embrague, o hacia la izquierda para disminuirlo.
- El ajuste final del embrague deberá seleccionarse trabajando.

— AJUSTE DE LA EMPUÑADURA —

El mango de la llave angular tiene una empuñadura ajustable que permite a los operarios individuales seleccionar una de las tres posiciones de grosor del mango. Los operarios que tengan manos grandes pueden seleccionar la posición más voluminosa, mientras que los operarios que tengan manos pequeñas pueden seleccionar el tamaño más pequeño. Para ajustar la empuñadura, proceda como sigue:

PARA PONER LA HERRAMIENTA EN SERVICIO

LUBRICACIÓN



Ingersoll-Rand N° 50



Ingersoll-Rand N° 100

Una lubricación adecuada es imprescindible para el rendimiento óptimo y larga vida útil de los engranajes en estas herramientas.

Recomendamos utilizar el siguiente conjunto de filtro-lubricador-regulador:


N° C11-03-G00

N° C16-C3-A29


Después de cada ocho horas de funcionamiento, a menos que se use un lubricador de línea de aire, inyecte 2 cc de aceite Ingersoll-Rand N° 10 en el casquillo de la admisión de aire.

Después de cada 50000 ciclos o un mes de funcionamiento, inyecte de 3 cc a 4 cc de grasa Ingersoll-Rand N° 67 en el engrasador situado en el conjunto de la caja de engranajes.

Después de cada ocho horas de funcionamiento, inyecte de 1 a 2 cc de grasa Ingersoll-Rand N° 67 en el engrasador situado en el conjunto de la carcasa angular.

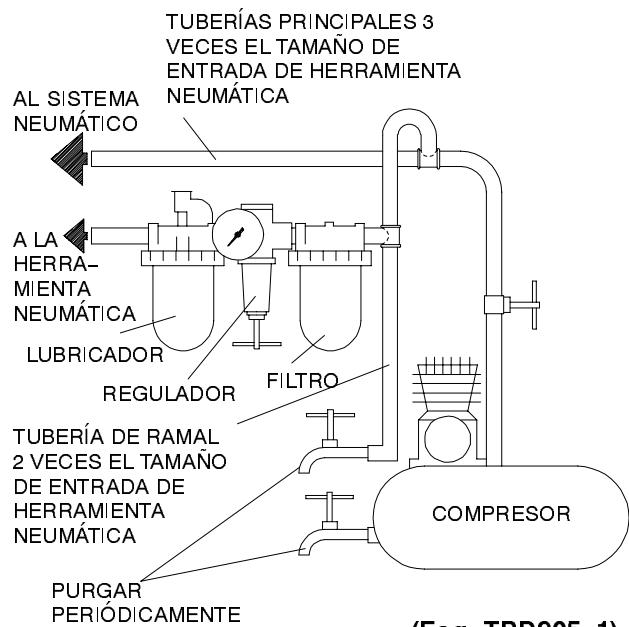

(Esq. TPD905-1)

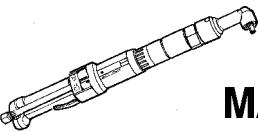


P

MANUAL DE FUNCIONAMENTO DE MANUTENÇÃO PARA CHAVES EM ÂNGULO COM controlo DE BINÁRIO SÉRIE DAA

AVISO

As Chaves em Ângulo Série DAA são concebidas para aplicações de montagem que requeiram monitorização e controlo preciso de binário, exactidão, consistência e capacidade de repetição. A Ingersoll-Rand não pode ser responsabilizada pela modificação de ferramentas para aplicações para as quais não tenha sido consultada.

! ADVERTÊNCIA

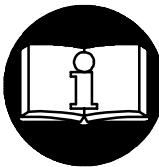

**IMPORTANTES INFORMAÇÕES DE SEGURANÇA EM ANEXO.
LEIA ESTE MANUAL ANTES DE OPERAR A FERRAMENTA.
É RESPONSABILIDADE DA ENTIDADE PATRONAL PÔR AS INFORMAÇÕES
CONTIDAS NESTE MANUAL À DISPOSIÇÃO DOS UTILIZADORES.
A NÃO OBEDIÊNCIA ÀS ADVERTÊNCIAS SEGUINTE PODERÁ RESULTAR
EM LESÕES PESSOAIS.**

COLOCAÇÃO DA FERRAMENTA EM SERVIÇO

- Sempre opere, inspeccione e mantenha esta ferramenta de acordo com o Código de Segurança do Instituto Americano de Padrões Nacionais para Ferramentas Pneumáticas Portáteis (ANSI B186.1).
- Para segurança, desempenho superior e durabilidade máxima das peças, opere esta ferramenta a uma pressão de ar máxima de 90 psig (6,2 bar/620 kPa) na admissão com uma mangueira de alimentação de ar com diâmetro interno de 3/8 pol. (10 mm).
- Desligue sempre a alimentação de ar e a mangueira de alimentação de ar antes de instalar, retirar ou ajustar qualquer acessório desta ferramenta, ou antes de fazer manutenção na mesma.
- Não utilize mangueiras de ar e acessórios danificados, puídos ou deteriorados.
- Certifique-se de que todas as mangueiras e acessórios são da dimensão correcta e que estão seguros firmemente. Consulte o Des. TPD905-1 para uma disposição de tubos típica.
- Utilize sempre ar limpo e seco a uma pressão máxima de 90 psig. Poeira, fumos corrosivos e/ou humidade excessiva podem destruir o motor de uma ferramenta pneumática.
- Não lubrifique a ferramenta com líquidos inflamáveis ou voláteis como querosene, gasóleo ou combustível para jactos.
- Não retire nenhum rótulo. Substitua os rótulos danificados.

UTILIZAÇÃO DA FERRAMENTA

- Use sempre protecção para os olhos ao operar ou fazer manutenção nesta ferramenta.
- Use sempre protecção auricular ao operar esta ferramenta.
- Mantenha as mãos, roupas soltas e cabelos longos afastados da extremidade rotativa da ferramenta.
- Note a posição da alavanca de inversão antes de operar a ferramenta de forma a estar ciente da direcção de rotação ao operar o regulador.
- Esteja preparado e alerta para mudanças súbitas no movimento durante o arranque e o funcionamento de qualquer ferramenta mecânica.
- Mantenha o corpo numa posição equilibrada e firme. Não estique o corpo ao operar esta ferramenta. Podem ocorrer binários de reacção elevados à ou abaixo da pressão do ar recomendada.
- O veio da ferramenta pode continuar a rodar por um curto período de tempo depois de soltar o regulador.
- As ferramentas pneumáticas podem vibrar durante a utilização. Vibração, movimentos repetitivos ou posições desconfortáveis podem ser nocivos às suas mãos e braços. Pare de utilizar qualquer ferramenta se ocorrer desconforto, sensação de formigueiro ou dor. Procure assistência médica antes de reiniciar a utilização.
- Use os acessórios recomendados pela Ingersoll-Rand.
- Use apenas caixas e acessórios de percussão. Não use caixas e acessórios manuais (cromo).
- Esta ferramenta não é concebida para funcionar em atmosferas explosivas.
- Esta ferramenta não é isolada contra choque eléctrico.

AVISO

A utilização de qualquer peça sobresselente que não seja Ingersoll-Rand genuína pode resultar em riscos à segurança, em desempenho reduzido da ferramenta e mais necessidade de manutenção, e pode invalidar todas as garantias.

As reparações só devem ser feitas por pessoal autorizado e com formação adequada. Consulte o Representante Autorizado Ingersoll-Rand mais próximo.

Envie toda a correspondência ao Escritório ou Distribuidor Ingersoll-Rand mais próximo.

© Ingersoll-Rand Company 1996




Impresso nos E.U.A.

INGERSOLL-RAND®
PROFESSIONAL TOOLS

IDENTIFICAÇÃO DAS ETIQUETAS DE ADVERTÊNCIA

! ADVERTÊNCIA

A NÃO OBEDIÊNCIA ÀS ADVERTÊNCIAS SEGUINTE PODERÁ RESULTAR EM LESÕES PESSOAIS.

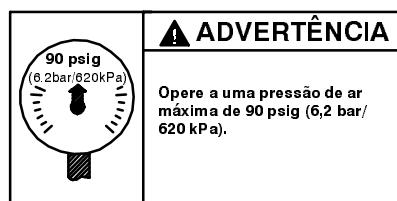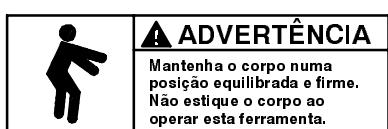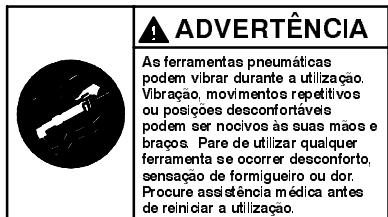

AJUSTES

AJUSTES

Antes de pôr a sua Chave em Ângulo Ingersoll-Rand Série DAA-EU em serviço, podem-se fazer vários ajustes opcionais à ferramenta que melhorarão o desempenho da mesma ou o conforto do operador. A selecção e os ajustes devem ser feitos antes de pôr a ferramenta em serviço.

ADMISSÃO DE AR NO TOPO/TRASEIRA

A mangueira de admissão de ar pode ser ligada convencionalmente à parte de trás da ferramenta ou ligada ao lado da Pega, se estiver disponível uma alimentação de ar aérea. Para mudar a ligação da Admissão, proceda como segue:


! ADVERTÊNCIA

Não remova o Bujão da Admissão sem primeiro desligar a alimentação de ar activa.

CUIDADO


Não aparafuse acessórios de rosca de tubo directamente nos orifícios do Casquilho da Admissão ou do Bujão da Admissão na Pega.

1. Desligue a mangueira de alimentação de ar, se esta estiver ligada à ferramenta.
2. Com uma chave inglesa, desaparafuse e remova o Casquilho da Admissão e o Vedante do Casquilho da Admissão.
3. Com uma chave sextavada de 1/4 de pol., desaparafuse e remova o Bujão da Admissão e o Vedante do Bujão da Admissão.
4. Instale o Bujão da Admissão e o Vedante na posição desejada e aperte o Bujão com um valor de binário entre 3,4 e 4,5 Nm. (Consulte TPD1254.)

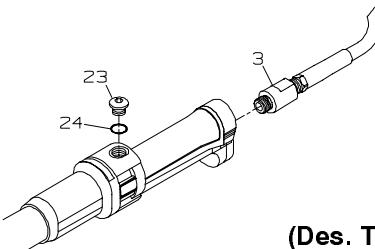

(Des. TPD1254)

5. Instale o Casquilho da Admissão e o Vedante no local desejado e aperte o Bujão com um valor de binário entre 27 e 40 Nm. (Consulte TPD1253.)

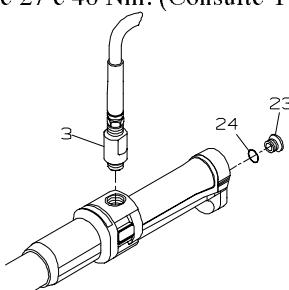

(Des. TPD1253)

ORIENTAÇÃO DA CABEÇA EM ÂNGULO

A Caixa de Engrenagens tem um entalhe a cada trinta graus na extremidade da Cabeça em Ângulo, o que permite que a mesma seja posicionada na localização radial óptima para realizar o trabalho. Para reposicionar a Cabeça em Ângulo, proceda como segue:

! ADVERTÊNCIA

Sempre que a Cabeça em Ângulo for instalada ou reposicionada, a Alavanca do Regulador tem que ser posicionada de forma que o binário de reacção não tenda a reter o regulador na posição “ON” (ligado).


AJUSTES

- Utilizando uma chave inglesa na parte sextavada da Caixa de Engrenagens e outra chave inglesa na Porca de Acoplamento, desaperte, mas não remova, a Porca de Acoplamento.

AVISO


Esta é uma rosca à esquerda. Rode a Porca no sentido dos ponteiros do relógio.

- Aplique alguma pressão contra a Cabeça em Ângulo e continue a desapertar a Porca de Acoplamento até o pino do Anel de Orientação da Carcaça desengatar do entalhe na Caixa de Engrenagens.
- Rode a Cabeça em Ângulo até à posição desejada e pressione a Cabeça em Ângulo contra a Caixa de Engrenagens, certificando-se de que o pino do Anel de Orientação engata num entalhe.
- Utilizando as duas chaves inglesas, aperte a Porca de Acoplamento com um valor de binário entre 27 e 40 Nm.

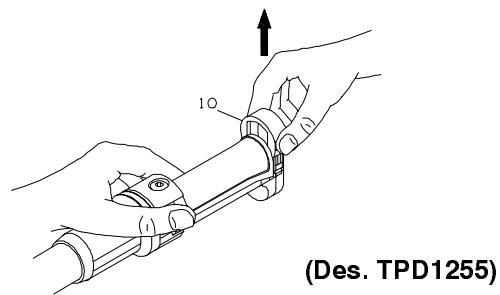


(Des. TPD1255)

- Segure o Punho Ajustável e deslide-o para trás até ele parar. (Consulte TPD1256.)
- Eleve ou baixe o Punho até as ranhuras desejadas dentro do Punho alinharem com as patilhas adequadas na Pega. (Consulte TPD1257.)

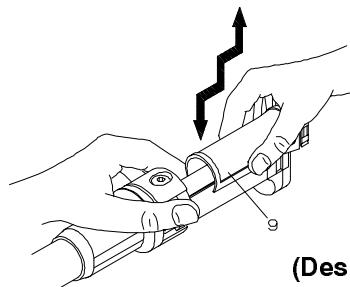


(Des. TPD1257)

- Deslide o Punho para a frente, sobre a Pega, até ele encostar no Colar ou no Conjunto do Colar. (Consulte TPD1258.)

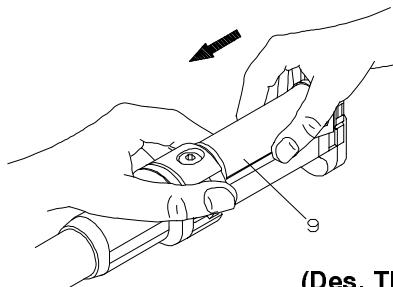

(Des. TPD1258)

- Pressione o Engate do Punho para baixo para a sua posição original para travar o ajuste em posição. (Consulte TPD1259.)

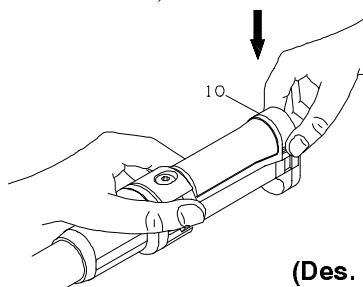

(Des. TPD1259)

AJUSTE DA EMBRAIAGEM

Para ajustar a embraiagem nestas Chaves em Ângulo, proceda como segue:

- Rode a Tampa do Orifício de Ajuste da Embraiagem até a ranhura da Tampa alinhar com a ranhura correspondente no Conjunto da Carcaça do Motor.
- Utilizando uma chave inglesa na haste de accionamento quadrada ou na secção sextavada, rode a haste de saída até o entalhe em meia-lua na Contraporca de Ajuste da Embraiagem (do lado do motor) ficar visível na ranhura.
- Insira uma chave Philips no entalhe da Contraporca e num dos entalhes da Porca de Ajuste da Embraiagem. Insira a chave o suficiente para criar uma folga entre a Contraporca e a Porca de Ajuste.
- Rode a chave de parafusos para a direita (como faria para apertar um parafuso) para aumentar o binário da embraiagem ou para a esquerda para diminuir o binário da embraiagem.
- O ajuste final da embraiagem deve ser efectuado no trabalho.

AJUSTE DO PUNHO

A Pega da Chave em Ângulo tem um Punho Ajustável que permite que operadores individuais seleccionem uma dentre três posições de grossura da pega. Os operadores que tenham mãos grandes podem seleccionar a posição mais volumosa e os operadores que tenham mãos pequenas podem seleccionar o tamanho menos volumoso. Para ajustar o Punho, proceda como segue:

- Segure as extremidades entalhadas do Engate do Punho Ajustável e, separando ligeiramente as extremidades, eleve o Engate até à sua posição mais elevada. (Consulte TPD1255.)

COLOCAÇÃO DA FERRAMENTA EM SERVIÇO

LUBRIFICAÇÃO



Ingersoll-Rand Nº 50



Ingersoll-Rand Nº 100

É imprescindível proporcionar lubrificação adequada para obter desempenho e durabilidade máximos das engrenagens destas ferramentas.

Recomendamos a seguinte Unidade
Filtro-Lubrificador-Regulador:


Nº. C11-03-G00

Nº. C16-C3-A29


Após cada oito horas de funcionamento, a menos que esteja a ser utilizado um lubrificador de linha de ar, injecte 2 cc de Óleo Ingersoll-Rand Nº 10 no Casquilho da Admissão.

Após cada 50 000 ciclos, ou um mês de funcionamento, injecte 3 a 4 cc de Massa Lubrificante Ingersoll-Rand Nº 67 no Copo de Massa do Conjunto da Caixa de Engrenagens.

Após cada oito horas de funcionamento, injecte 1 a 2 cc de Massa Lubrificante Ingersoll-Rand Nº 67 no Copo de Massa do Conjunto da Carcaça em Ângulo.

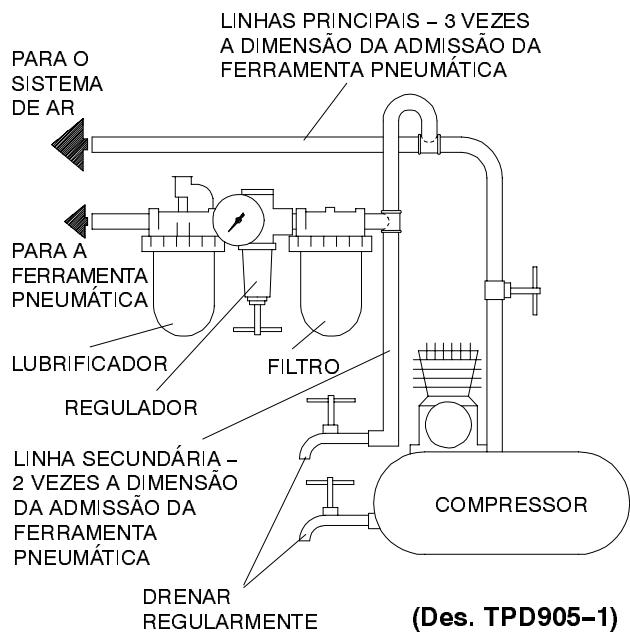

MAINTENANCE SECTION

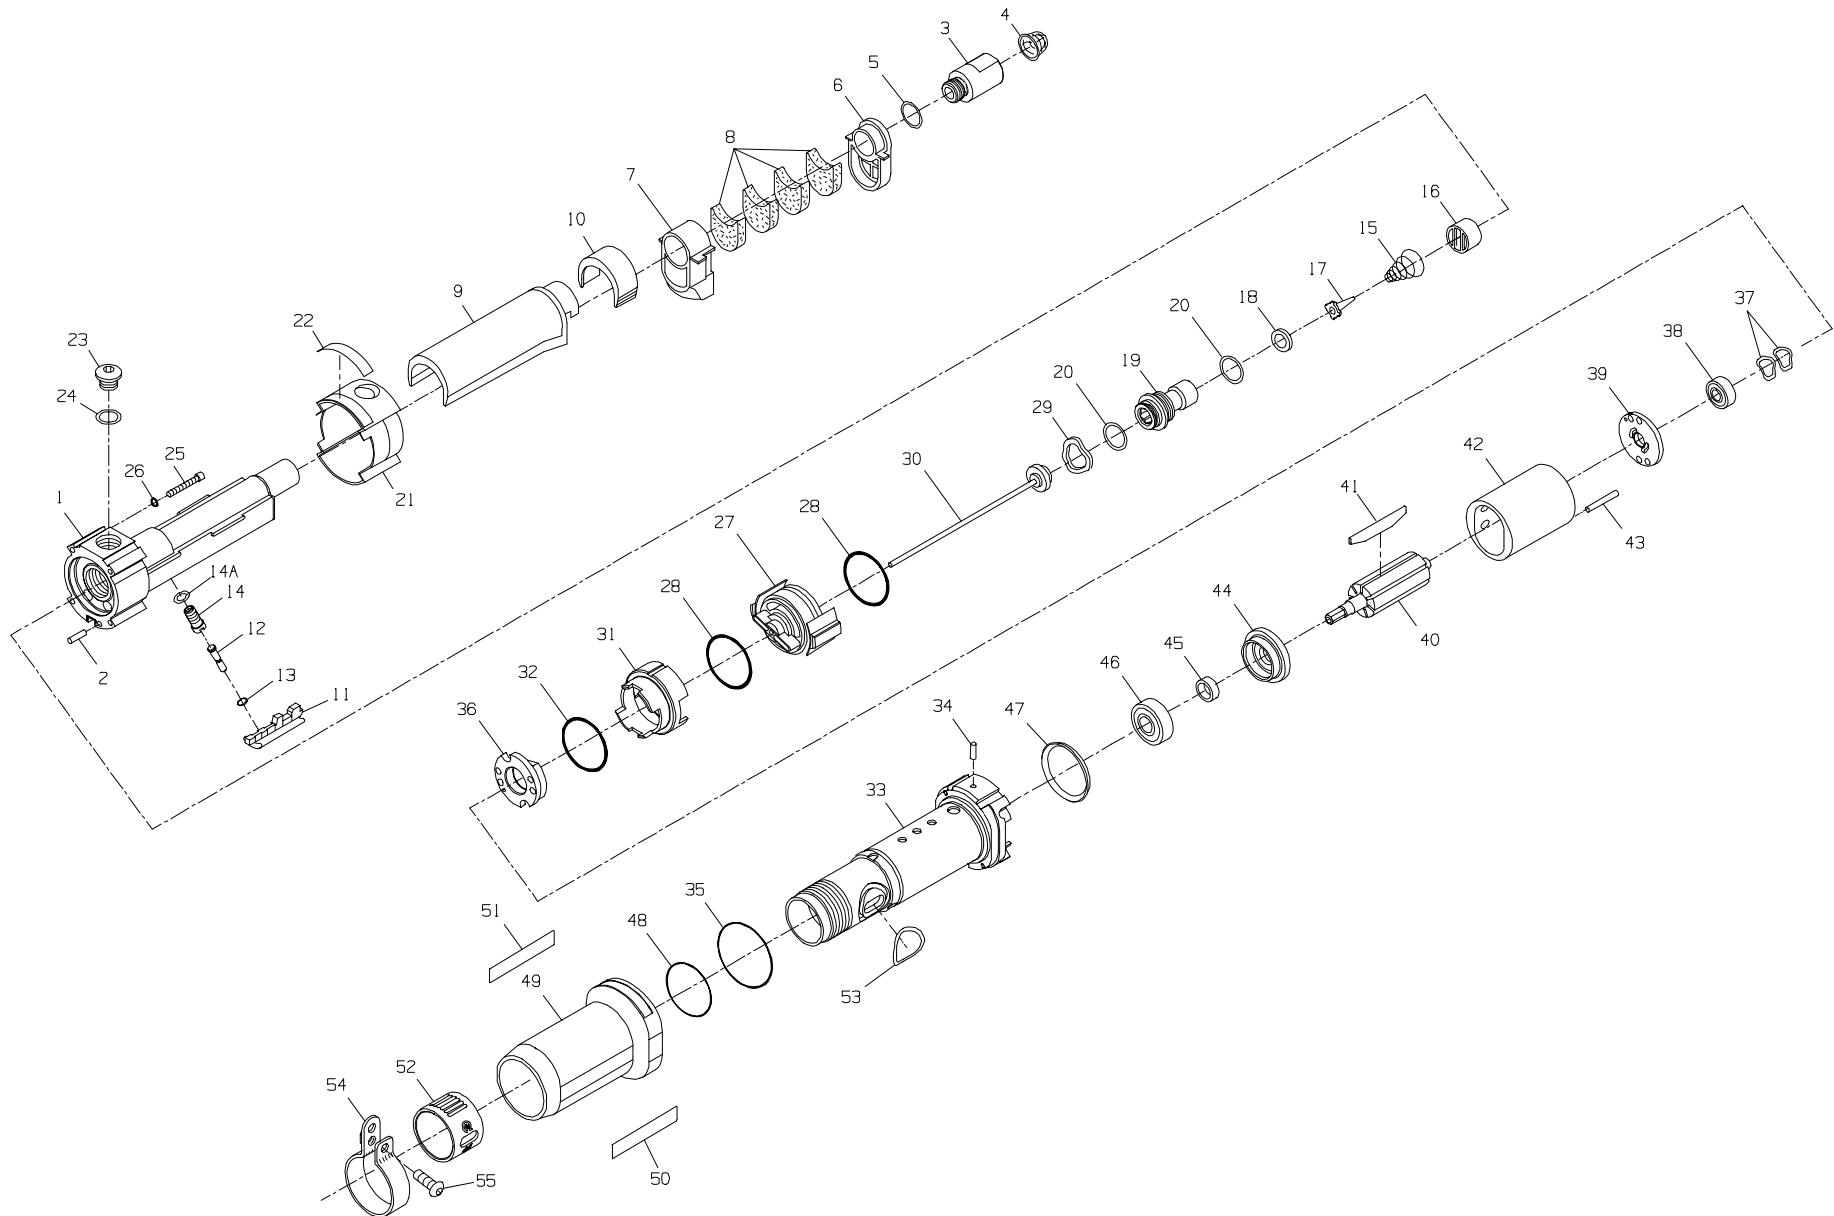

(Dwg. TPA1314-1)

		PART NUMBER FOR ORDERING		PART NUMBER FOR ORDERING	
1	Handle Assembly	DAA40-A25	◆ 38	Rear Rotor Bearing	DG20-22
2	Handle	DAA40-B25	39	Rear End Plate	DAA40-12
3	Handle Alignment Pin	7RL-56	40	Rotor	DAA40-53
◆◆ 4	Inlet Bushing	DAA40-565	◆ 41	Vane Packet (set of 7 Vanes)	DAA40-42-7
◆◆ 5	Inlet Bushing Screen	5RA-61	42	Cylinder Assembly	DAA40-A3
6	Inlet Bushing Seal	DAA40-103	43	Cylinder Dowel	9DF5846-667
7	Exhaust Deflector	DAA40-23	44	Front End Plate	DAA40-11
◆◆ 8	Muffler Body	DAA40-123	45	Rotor Spacer	DG10-65-5
9	Muffler Element (3)	DAA40-311	◆ 46	Front Rotor Bearing	LG1-24
10	Adjustable Grip	DAA40-30	47	Motor Clamp Washer	401A9-554
11	Adjustable Grip Latch	DAA40-402	◆ 48	Front Motor Housing Seal	WFS182-211
12	Throttle Lever	DAA40-273	+ 49	Housing Sleeve Assembly	
◆◆ 13	Throttle Valve Plunger	DAA40-94		for models ending in -EU	DAA40-EU-A39
14	Valve Plunger Seal	WWA100-405		for all other models	DAA40-A39
14A	Valve Plunger Bushing	DAA40-503	50	Warning Label	
◆◆ 15	Bushing Seal	8SL-259		for models ending in -EU	EU-99
16	Throttle Valve Spring	R4-262		for all other models	DAA40-99
◆◆ 17	Throttle Valve Guide	DAA40-91	51	Nameplate	
◆◆ 18	Throttle Valve	DAA40-302		for DAA9 models ending in -EU	DAA9-EU-301
19	Throttle Valve Seat	DAA40-303		for all other DAA9 models	DAA9-301
◆◆ 20	Throttle Body	DAA40-300		for DAA15 models ending in -EU	DAA14-EU-301
21	Throttle Body Seal (2)	410-283		for DAA14 and all other DAA15	
21	Collar (for models ending in -EU)	DAA40-703		models	
• 22	Collar Assembly (for all other models)	DAA40-A703		for DAA25 models ending in -EU	DAA14-301
23	Warning Label	DAA40-98		for all other DAA25 models	DAA25-EU-301
◆◆ 24	Inlet Plug	DAA40-29		for DAA35 models ending in -EU	DAA25-301
• 25	Inlet Plug Seal	DAA40-103		for all other DAA35 models	DAA35-EU-301
• 26	Handle Mounting Screw (4)	DAA40-68		for DAA40 models ending in -EU	DAA35-301
27	Mounting Screw Lock Washer (4)	DAA40-58		for all other DAA40 models	DAA40-EU-301
◆◆ 28	Reverse Valve	DAA40-329		for DAA60 models ending in -EU	DAA40-301
29	Reverse Valve Seal (2)	R00A2-103	◆ 52	for all other DAA60 models	DAA60-EU-301
◆◆ 30	Reverse Valve Washer (2)	DAA40-191		Clutch Adjusting Hole Cover	DAA60-301
31	Shutoff Valve Assembly	DAA40-A435	53	Adjusting Hole Cover O-ring	DAA40-415
◆◆ 32	Motor Clamp Spacer	DAA40-13	54	Hanger	R4-210
33	Motor Clamp Seal	WFS182-211	55	Hanger Screw	DAA40-A366
34	Motor Housing Assembly	DAA40-A40	*	Screwdriver	DAA40-638
◆◆ 35	Housing Alignment Pin	DAA40-669	*	Tune-up Kit (includes illustrated items 4, 5,	DAA40-26
36	Rear Motor Housing Seal	DAA40-610		13, 15, 17, 18, 20[2], 24, 28[2], 30, 32, 35, 38,	
37	Rear Rotor Bearing Housing	DAA40-203		46, 48, 53, 62[3], 63, 64, 65, 66[6], 67[3], 71,	
	Rotor Bearing Spring (2)	DG20-278		111 and 112)	DAA40-TK1


* Not illustrated.

◆ Indicates Tune-up Kit part.

• To keep downtime to a minimum, it is desirable to have on hand certain repair parts. We recommend that you stock one (pair or set) of each part indicated by a bullet (•) for every four tools in service.

+ When ordering a Housing Sleeve Assembly, order a new Nameplate (51) for the model tool on which the new Sleeve Assembly will be installed.

MAINTENANCE SECTION

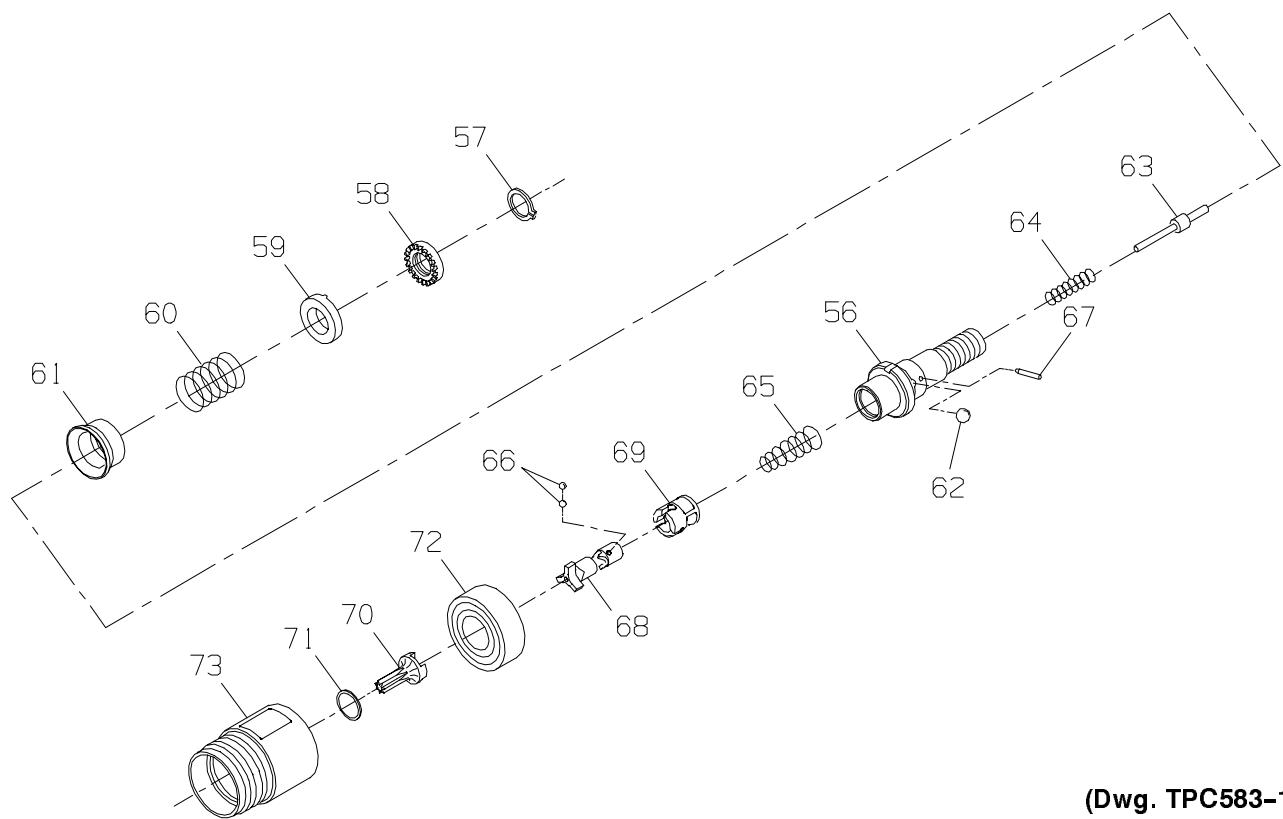

(Dwg. TPC583-1)


PART NUMBER FOR ORDERING

	Clutch Assembly	DAA40-A581
• 56	Clutch Shaft	DAA40-581
• 57	Clutch Adjusting Nut Stop.....	12E-6
58	Clutch Adjusting NutDAA40-582
59	Clutch Adjusting Nut LockDAA40-588
60	Clutch Spring	DAA40-583
61	Cam Follower	DAA40-406
♦• 62	Clutch Ball (3)	2U-722
♦• 63	Shutoff Spool	DAA40-900
♦• 64	Valve Return Spring.....	.DAA40-842
♦• 65	Reset Spring	DAA40-627
♦• 66	Shutoff Ball (6)	DAA40-629
♦• 67	Cam Pin (3)	DAA40-704
68	Cam Shaft.....	DAA40-502
69	Cam Block	DAA40-721
70	Clutch Spindle	DAA40-584
♦• 71	Spindle Retainer.....	.7L1B-28
72	Clutch Bearing	R1602-510
73	Clutch Housing	DAA40-580

♦ Indicates Tune-up Kit part.

To keep downtime to a minimum, it is desirable to have on hand certain repair parts. We recommend that you stock one (pair or set) of each part indicated by a bullet (•) for every four tools in service.

GEAR UNIT MODULES

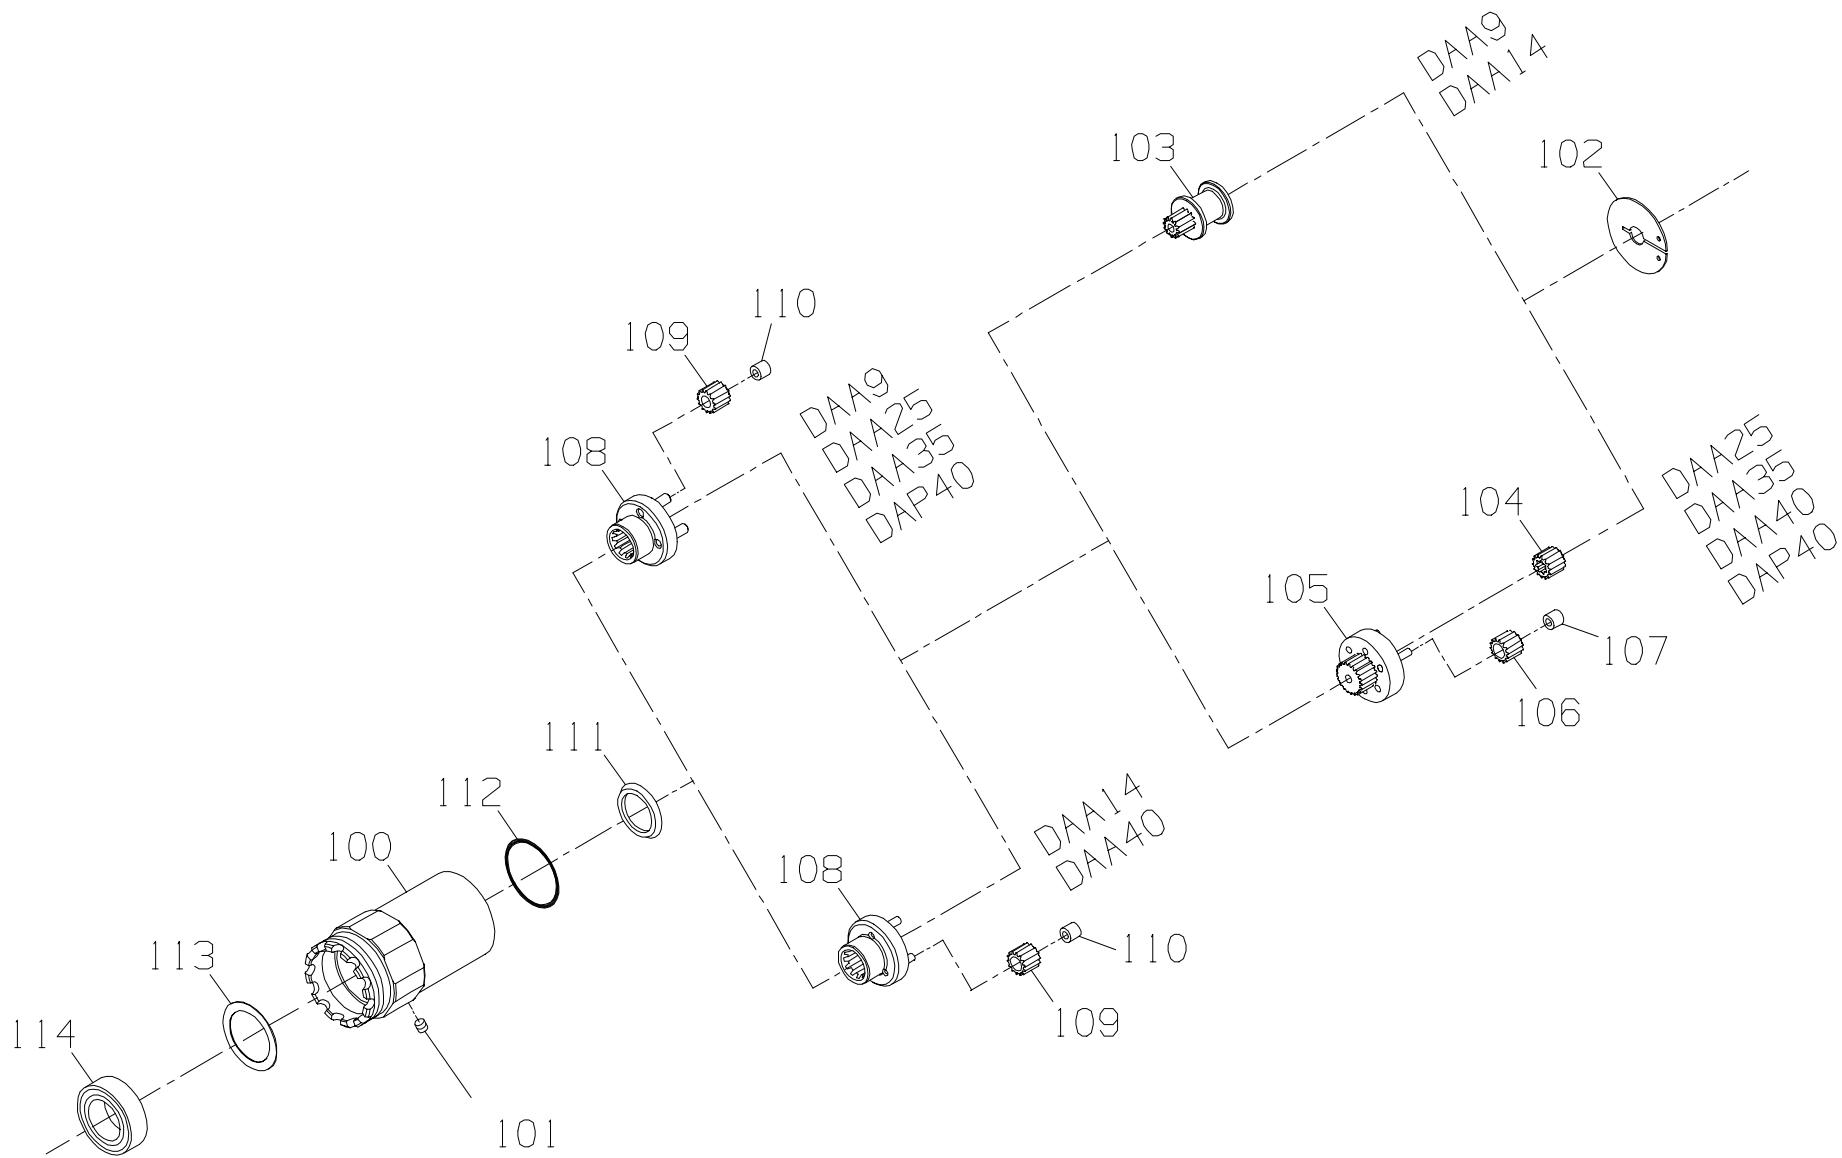

(Dwg. TPC582-1)


PART NUMBER FOR ORDERING

	• +	Gear Case Module	DAA9-M37	DAA14-M37	DAA25-M37	DAA35-M37	DAA40-M37	DAP40-M37
100		Gear Case Assembly	DAA40-B37	DAA40-B37	DAA40-B37	DAA40-B37	DAA40-B37	DAA40-B37
101		Grease Fitting	D0F9-879	D0F9-879	D0F9-879	D0F9-879	D0F9-879	D0F9-879
102		Gear Retainer	DAA40-81	DAA40-81	DAA40-81	DAA40-81	DAA40-81	DAA40-81
• 103		Drive Coupling	DAA9-17	DAA14-17	-----	-----	-----	-----
104		Rotor Pinion	-----	-----	DAA25-17	DAA35-17	4RLM-17	-----
• 105		Planet Gear Head	-----	-----	DAA25-216	DAA35-216	DAA40-216	DAP40-216
106		Planet Gear (3)	-----	-----	4RLN-10	6WTN-10	4RLM-10	4RLL-10
• 107		Planet Gear Bearing (3)	-----	-----	6WTM-500	7AH-500	6WTM-500	6WTM-500
108		Planet Gear Spindle	DAA9-8	DAA14-8	DAA25-8	DAA9-8	DAA40-8	DAA9-8
109		Spindle Planet Gear Assembly (4)...	6WTP-A10	-----	-----	-----	-----	-----
110		Spindle Planet Gear Bearing	WFS182-654	-----	-----	-----	-----	-----
109		Spindle Planet Gear (4 for DAA25-M37, DAA35-M37 and DAP40-M37; 3 for all others)	-----	4RLL-10	6WTM-10	6WTP-10	DAA40-10	6WTP-10
110		Spindle Planet Gear Bearing (4 for DAA25-M37, DAA35-M37 and DAP40-M37; 3 for all others)	-----	6WTM-500	6WTM-500	WFS182-654	DAA40-500	WFS182-654
◆ 111		Grease Shield Support	DAA40-5	DAA40-5	DAA40-5	DAA40-5	DAA40-5	DAA40-5
◆ • 112		Shield Support O-ring	DAA40-606	DAA40-606	DAA40-606	DAA40-606	DAA40-606	DAA40-606
• 113		Grease Shield	DAA40-701	DAA40-701	DAA40-701	DAA40-701	DAA40-701	DAA40-701
• 114		Gear Case Bearing	R1602-510	R1602-510	R1602-510	R1602-510	R1602-510	R1602-510

- ◆ Indicates Tune-up Kit part.
- To keep downtime to a minimum, it is desirable to have on hand certain repair parts. We recommend that you stock one (pair or set) of each part indicated by a bullet (•) for every four tools in service.
- + To assure proper gear placement, refer to **Gear Identification Chart** on page 14.

ANGLE HEAD MODULES

22

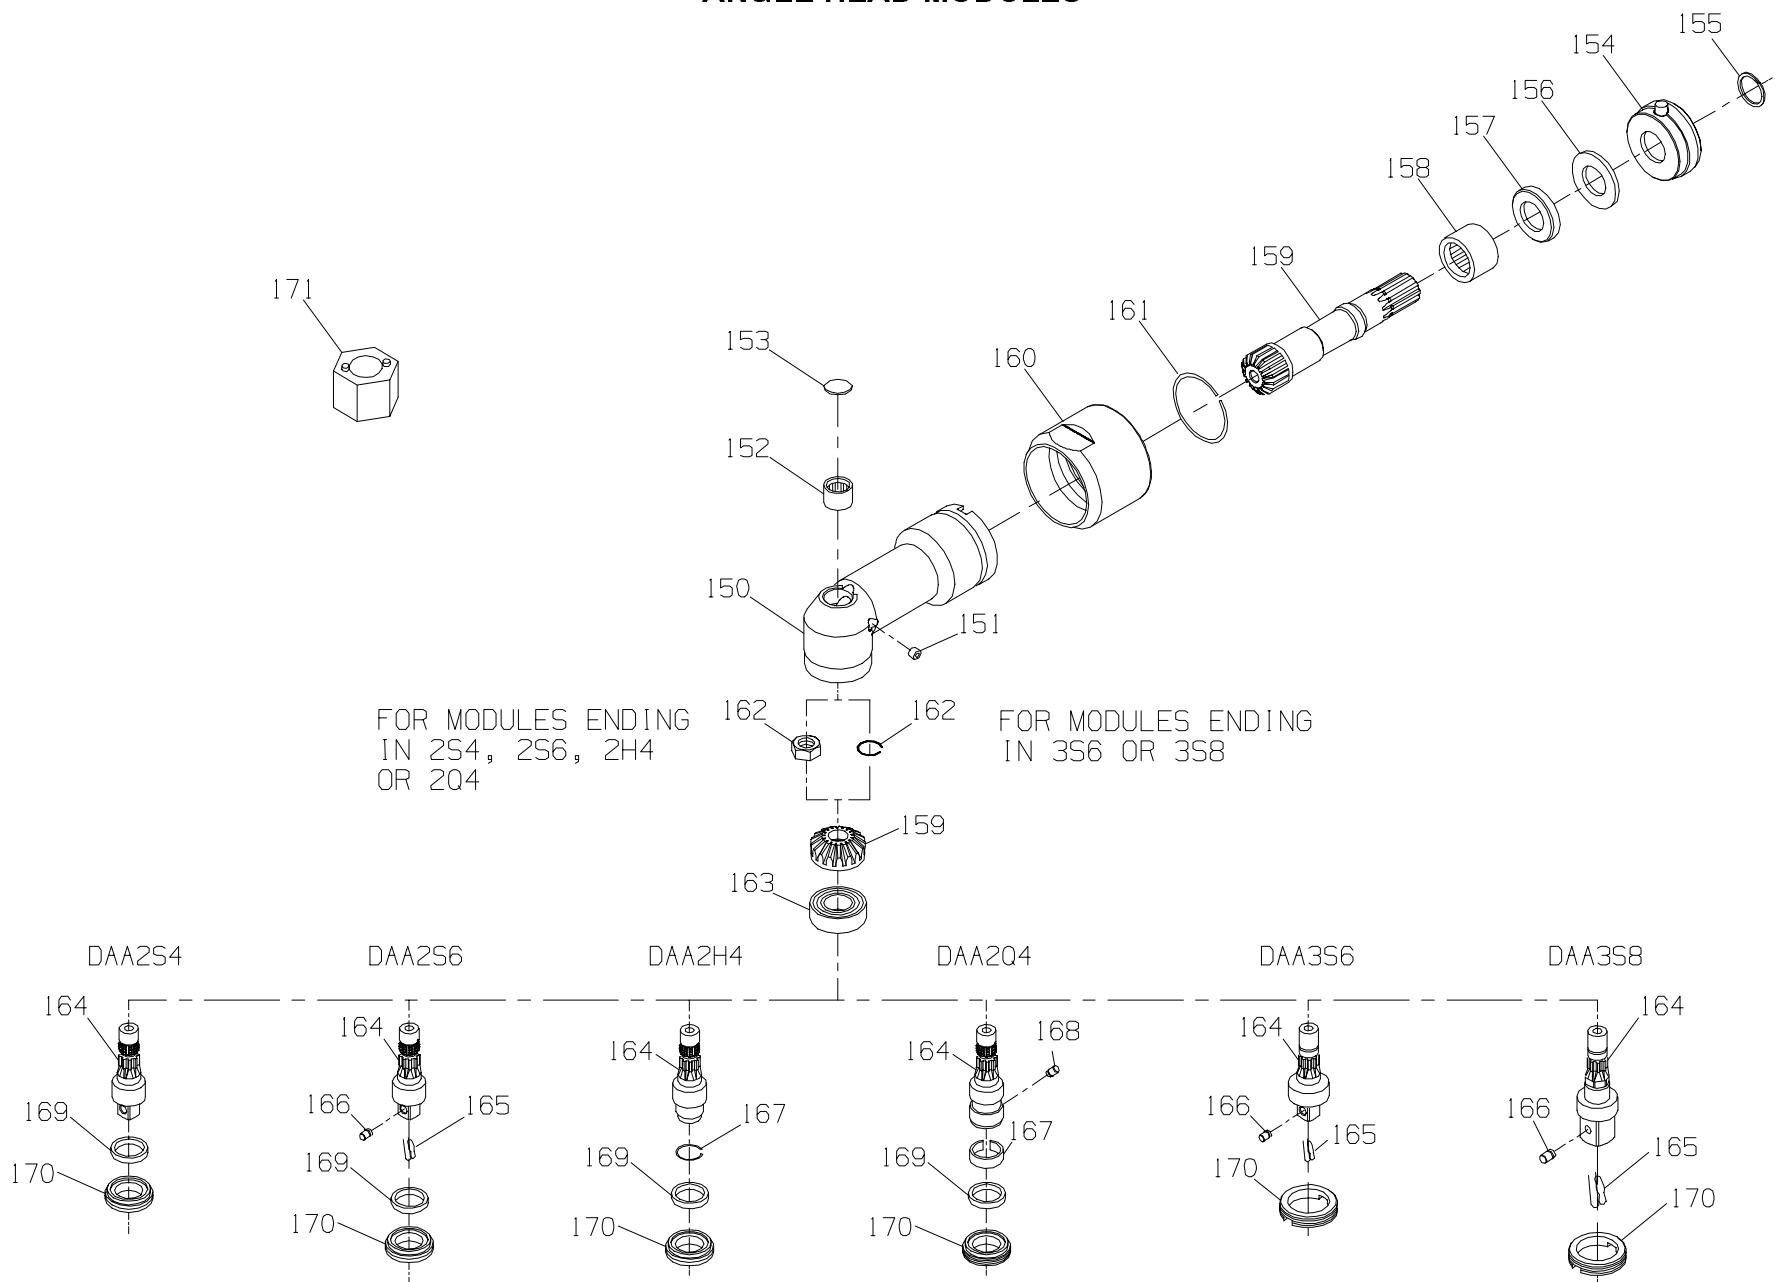

(Dwg. TPB939)

PART NUMBER FOR ORDERING

	Angle Housing Module	DAA2S4	DAA2S6	DAA2H4	DAA2Q4	DAA3S6	DAA3S8
150	Angle Housing Assembly	DAA2-B550	DAA2-B550	DAA2-B550	DAA2-B550	DAA3-B550	DAA3-B550
151	Grease Fitting	D0F9-879	D0F9-879	D0F9-879	D0F9-879	D0F9-879	D0F9-879
• 152	Upper Spindle Bearing	120A4-603	120A4-603	120A4-603	120A4-603	8SA32-603	8SA32-603
153	Angle Housing Cap	-----	-----	-----	-----	8SA32-110	8SA32-110
154	Housing Orientation Ring	DAA2-A682	DAA2-A682	DAA2-A682	DAA2-A682	DAA2-A682	DAA2-A682
155	Orientation Ring Retainer	182A53-689	182A53-689	182A53-689	182A53-689	182A53-689	182A53-689
• 156	Thrust Bearing	R1610-105	R1610-105	R1610-105	R1610-105	R1610-105	R1610-105
157	Thrust Washer	182A53-554	182A53-554	182A53-554	182A53-554	182A53-554	182A53-554
• 158	Bevel Pinion Bearing	R1410-593	R1410-593	R1410-593	R1410-593	182A53-606	182A53-606
• 159	Bevel Pinion and Bevel Gear (sold only as a matched set)	DAA2-A552	DAA2-A552	DAA2-A552	DAA2-A552	DAA3-A552	DAA3-A552
160	Coupling Nut	DAA2-27	DAA2-27	DAA2-27	DAA2-27	DAA2-27	DAA2-27
161	Coupling Nut Retainer	DAA2-29	DAA2-29	DAA2-29	DAA2-29	DAA2-29	DAA2-29
162	Bevel Gear Retainer	120A4-578	120A4-578	120A4-578	120A4-578	8SA32-578	8SA32-578
• 163	Lower Spindle Bearing	6L2D-59	6L2D-59	6L2D-59	6L2D-59	8SA32-593	8SA32-593
164	Spindle Assembly	DAA2-A607-1/4	6L2D-A607	DAA2-A786-4	DAA2-A586-4	8SA32-P507-3/8	DAA3-P507-1/2
165	Socket Retaining Spring	-----	401-718	-----	-----	401-718	5UHD-718
166	Socket Retaining Pin	-----	5020-716	-----	-----	5020-716	804-716
167	Bit Retaining Spring	-----	-----	5L2C4-425	102A60-241	-----	-----
168	Bit Retaining Ball	-----	-----	-----	AV1-255	-----	-----
• 169	Spindle Seal	6L2D-720	6L2D-720	6L2D-720	6L2D-720	-----	-----
170	Spindle Bearing Cap	6L2D-531	6L2D-531	6L2D-531	6L2D-531	8SA32-531	8SA32-531
171	Spindle Bearing Cap Wrench	141A12-26	141A12-26	141A12-26	141A12-26	8SA32-26	8SA32-26

- To keep downtime to a minimum, it is desirable to have on hand certain repair parts. We recommend that you stock one (pair or set) of each part indicated by a bullet (•) for every four tools in service.

MAINTENANCE SECTION

GEAR IDENTIFICATION CHART				
PART NUMBER	PART NAME	ILLUS. NO.	NUMBER OF TEETH	
			EXTERNAL	INTERNAL
DAA9-17	Drive Coupling	103	12	7
DAA14-17	Drive Coupling	103	7	7
4RLM-17	Rotor Pinion	104	19	7
DAA35-17	Rotor Pinion	104	17	7
DAA25-17	Rotor Pinion	104	14	7
DAA25-216	Planet Gear Head	105	21	---
DAA35-216	Planet Gear Head	105	12 •	---
DAP40-216	Planet Gear Head	105	12 •	---
DAA40-216	Planet Gear Head	105	9	---
4RLL-10	Planet Gear	106 & 109	20 +	---
DAA40-10	Planet Gear	109	20 +	---
4RLM-10	Planet Gear	106	19	7
6WTP-10	Planet Gear	109	18	---
4RLN-10	Planet Gear	106	17	---
6WTN-10	Planet Gear	106	16	---
6WTM-10	Planet Gear	109	14	---

- Gear Head DAP40-216 can be distinguished from Gear Head DAA35-216 by the additional three holes in the face of the Gear Head.
- + Gear DAA40-10 can be distinguished from Gear 4RLL-10 by the annular groove across the center of the gear teeth.

MAINTENANCE SECTION

⚠ WARNING

Always turn off the air supply and disconnect the air supply hose before installing, removing or adjusting any accessory on this tool, or before performing any maintenance on this tool. Failure to do so could result in injury.

Always use protective eyewear when performing maintenance on a tool or operating a tool.

LUBRICATION



Ingersoll-Rand No. 10 Ingersoll-Rand No. 67

Whenever the Series DAA Angle Wrench is disassembled for repair or replacement of parts, clean the parts and re-lubricate them as follows:

1. Moisten all O-rings with O-ring lubricant.
2. Work approximately 3 cc to 4 cc of grease into the gear trains. Grease the Planet Gear Bearings (107 and 110), the gear teeth inside the Gear Case (100) and the planet gear shafts on the Planet Gear Head (105) and Spindle Planet Gear Head (108).
3. Apply 4 cc to 8 cc of grease to the Bevel Pinion and Bevel Gear (159) used in the DAA2 Angle Attachments and 6 cc to 10 cc of grease to the Bevel Pinion and Bevel Gear used in the DAA3 Angle Attachments.
4. The use of an air line lubricator is recommended. For permanent installations, we recommend using an Ingersoll-Rand C11-03-G00 Filter-Lubricator-Regulator Unit.

DISASSEMBLY

General Instructions

1. Do not disassemble the tool any further than necessary to replace or repair damaged parts.
2. Do not press any needle bearing from a part unless you have a new needle bearing on hand for installation. Needle bearings are always damaged during the removal process.
3. Whenever grasping a part in a vise, always use leather-covered or copper-covered vise jaws to protect the surface of the part and help prevent distortion.
4. Do not remove any part which is a press fit in or on a subassembly unless the removal of that part is necessary for repairs or replacement.

Disassembly of the Angle Attachment

1. Carefully grasp the hex of the Gear Case Assembly (100) in copper-covered vise jaws so that the Angle Housing Assembly (150) is facing downward.
2. Using a wrench on the flats of the Coupling Nut (160), loosen the Coupling Nut from the Gear Case.

NOTICE

This is a left-hand thread.

Remove the tool from the vise. Unscrew the Coupling Nut and separate the Angle Housing Assembly from the Gear Case.

3. Carefully grasp the Angle Housing Assembly in copper-covered vise jaws with the Spindle Assembly (164) facing upward.
4. Using the Spindle Bearing Cap Wrench (171), unscrew and remove the Spindle Bearing Cap (170).

NOTICE

This is a left-hand thread.

For models ending in 2S4, 2S6, 2H4 or 2Q4, if the Spindle Seal (169) is damaged, remove it. Withdraw the Spindle from the Angle Housing.

5. Inspect the Lower Spindle Bearing (163) for looseness or roughness. If either of these conditions exists, replace the Bearing as follows:

For models ending in 3S6 or 3S8

- a. Remove the Bevel Gear Retainer (162).
- b. Press the Bevel Gear (159) from the Spindle.
- c. Press the Lower Spindle Bearing from the Spindle.

For models ending in 2S4, 2S6, 2H4 or 2Q4

- a. Grasp the square drive end of the Spindle in copper-covered vise jaws.
 - b. Unscrew the Bevel Gear Retainer (162) and lift the Bevel Gear (159) off the Spindle.
 - c. Press the Lower Spindle Bearing from the Spindle.
6. If the Upper Spindle Bearing (152) appears rough or loose, press it from the Angle Head.

NOTICE

Do not remove the Upper Spindle Bearing unless you have a new Bearing ready to install. This type of Bearing is always damaged during the removal process.

NOTICE

The Angle Head used in models ending in 3S6 or 3S8 will require a new Angle Housing Cap (153) when the Upper Spindle Bearing is installed.

7. Remove the Orientation Ring Retainer (155) and slide the Housing Orientation Ring (154), Thrust Bearing (156) and Thrust Washer (157) from the pinion shaft.

MAINTENANCE SECTION

8. Grasp the spline of the pinion shaft in copper-covered vise jaws and while gently tapping the rear face of the Angle Attachment with a soft hammer, pull the Bevel Pinion (159) and Bevel Pinion Bearing (158) from the Angle Attachment.

NOTICE

Do not remove the Bevel Pinion and Bearing unless you have a new Bearing on hand.

After the Angle Attachment is disassembled, check all parts for damage or wear.

NOTICE

If the gear teeth on either the Bevel Pinion or Bevel Gear are worn or chipped, replace both parts. These are a matched set and must be replaced with another matched set.

NOTICE

The Bevel Gear and Bevel Pinion are specially matched sets. Some sets are color coded for manufacturing purposes only. Only the Gear and Pinion set furnished as a replacement part or the same Gear and Pinion set removed from one tool, is a matched set. A Bevel Gear from one tool used with a Bevel Pinion from another tool with the same color code IS NOT A MATCHED SET. Replace these parts only as a matched set. Failure to do so will result in unsatisfactory tool performance and damage to the Bevel Gear and Bevel Pinion.

Disassembly of the Gear Case

1. Grasp the Gear Case Assembly (100) in copper-covered vise jaws with the assembled motor upward, and using a wrench on the flats of the Clutch Housing (73), loosen the joint and remove the tool from the vise. Unscrew the Gear Case from the Clutch Housing.
2. Using snap ring pliers, remove the Gear Retainer (102) from the clutch end of the Gear Case.
3. **For DAA9, DAA9-EU, DAA14, DAA15 and DAA15-EU models, remove the Drive Coupling (103). For DAA25, DAA25-EU, DAA35, DAA35-EU, DAA40, DAA40-EU, DAA60 and DAA60-EU models, remove the Rotor Pinion (104), Planet Gear Head (105), Planet Gears (106) and Planet Gear Bearings (107).**
4. Slide the Spindle Planet Gears (109) and Spindle Planet Gear Bearings (110) off the shafts of the Planet Gear Spindle (108).
5. With the clutch end of the Gear Case standing on the table of an arbor press, carefully press the Planet Gear

Spindle out of the Gear Case Bearing (114). Remove the Bearing and Grease Shield (113) from the Gear Case and the Grease Shield Support (111) and Shield Support O-ring (112) from the hub of the Planet Gear Spindle.

Disassembly of the Clutch

1. Carefully grasp the assembled tool at the Housing Sleeve Assembly (49) with the clutch end upward, and using a wrench on the flats of the Clutch Housing (73), unscrew and remove the Clutch Housing.
2. Grasp the Clutch Spindle (70) and pull the assembled clutch off the Rotor (40).
3. Remove the Shutoff Spool (63) and Valve Return Spring (64) from either the shaft of the Rotor or the inside of the Clutch Shaft (56).
4. Insert the jaws of snap ring pliers into the holes of the Clutch Adjusting Nut Stop (57) and expand the Stop only enough to release the pressure against the Clutch Shaft. While keeping the pressure relieved, unscrew the assembled clutch from the Stop as you would unscrew a nut from a bolt. Expanding the Stop sufficiently to clear the Shaft in a normal manner will distort the snap ring beyond acceptable limits.
5. Insert the tip of a #1 Phillips head screwdriver into the notch in the motor end of the Clutch Adjusting Nut Lock (59) and one of the notches in the Clutch Adjusting Nut (58) and turn the screwdriver counter-clockwise (as you would to remove a screw) to back the Nut off the Clutch Shaft. Insert the screwdriver far enough to create a gap between the Nut Lock and Adjusting Nut.
6. Remove the Nut Lock, Clutch Spring (60), Cam Follower (61) and three Clutch Balls (62) from the Clutch Shaft.
7. Pull the Clutch Bearing (72) off the spindle end of the Clutch Shaft.
8. To remove the three Cam Pins (67), position one pin downward and sharply rap the motor end of the Clutch Shaft on a workbench mat or a piece of corrugated cardboard box. Repeat the process for each of the remaining two Pins.
9. Using a thin blade screwdriver, spiral the Spindle Retainer (71) out of the groove in the Clutch Shaft and pull the Clutch Spindle from the Shaft.
10. Pull the Cam Shaft (68), Cam Block (69) and Reset Spring (65) from the Clutch Shaft.
11. To remove the six Shutoff Balls (66), insert the shaft of the Shutoff Spool into the end of the Cam Shaft to prevent the Balls from becoming lodged in the central opening. Position one of the shutoff ball openings downward and sharply rap the Cam Shaft on a work bench mat or a piece of corrugated cardboard box. Two Shutoff Balls are installed in each hole. Repeat the process at the other two locations for the remaining four Balls.

MAINTENANCE SECTION

Disassembly of the Motor

1. Move the Adjustable Grip (9) to the lowest position on the Handle (1).
2. Using a 2-1/2 mm hex wrench, unscrew and remove the four Handle Mounting Screws (25) with the Mounting Screw Lock Washers (26).
3. Pull the assembled motor away from the Handle.
4. Pull the Clutch Adjusting Hole Cover (52) and the Housing Sleeve Assembly off of the Motor Housing (33). Remove the Adjusting Hole Cover O-ring (53), the Front Motor Housing Seal (48) and Rear Motor Housing Seal (35) from the Motor Housing Assembly.
5. Remove the Reverse Valve (27), two Reverse Valve Seals (28) and the Shutoff Valve Assembly (30) from the Motor Housing Assembly (33).
6. Lightly rap the handle end of the Motor Housing on a padded surface to dislodge the assembled motor from the Housing.
7. Remove the Motor Clamp Washer (47) from the Housing or front of the assembled motor.
8. Grasping the Front End Plate (44) in one hand, tap the hex shaft end of the Rotor (40) with a plastic hammer to remove the Front Rotor Bearing (46), Front End Plate and Rotor Spacer (45) from the Rotor.
9. Slide the Cylinder Assembly (42) off the Rotor and remove the seven Vanes (41).
10. Remove the Rear Rotor Bearing Housing (36) and two Rotor Bearing Springs (37) from the handle end of the Rotor.
11. Press the Rear Rotor Bearing (38) along with the Rear End Plate (39) from the shaft of the Rotor.

Disassembly of the Handle

1. Remove the Reverse Valve Washer (29) from the hub of the Throttle Body (19).
2. Insert a 5/16" hex wrench into the end of the Throttle Body and unscrew it from the Handle (1).
3. Remove the two Throttle Body Seals (20), Throttle Valve Seat (18), Throttle Valve (17) and Throttle Valve Spring (15).
4. Using a 1/4" hex wrench or an adjustable wrench, unscrew and remove either the Inlet Plug (23) or Inlet Bushing (3) and Seal (24 or 5) from the side of the Handle.
5. Depress the Throttle Lever (11) and slide the Collar Assembly (21) rearward until it clears the Lever.
6. Remove the Throttle Lever from the Handle.
7. Using a screwdriver, unscrew and remove the Valve Plunger Bushing (14) and Bushing Seal (14A) along with the Throttle Valve Plunger (12) and Valve Plunger Seal (13).
8. Pull the Throttle Valve Guide (16) from the motor end of the Handle.

9. Using an adjustable wrench or a 1/4" hex wrench, unscrew and remove either the Inlet Bushing or Inlet Plug and Seal from the end of the Handle.
10. Pull the Exhaust Deflector (6), Muffler Body (7) and two Muffler Elements (8) off the end of the Handle.
11. Raise the Adjustable Grip Latch (10) to the highest position, spread the open end slightly and slide the Latch off the rear of the Handle.
12. Slide the Adjustable Grip (9) and Collar Assembly off the rear of the Handle.

ASSEMBLY

General Instructions

1. Unless otherwise noted, always press on the stamped end of a needle bearing when installing the needle bearing in a recess.
2. Always press on the **inner ring** of a ball-type bearing when installing the bearing on a shaft.
3. Always press on the **outer ring** of a ball-type bearing when installing the bearing in a bearing recess.
4. Whenever grasping a part in a vise, always use leather-covered or copper-covered vise jaws to protect the surface of the part and help prevent distortion. This is particularly true of threaded members.
5. Except for bearings, always clean every part and wipe every part with a thin film of oil before installation.
6. Apply O-ring lubricant to each O-ring before assembly.
7. Check every bearing for roughness. If an open bearing must be cleaned, wash it thoroughly in clean solvent and dry with a clean cloth. Sealed or shielded bearings should never be cleaned. Work grease thoroughly into every open bearing before installation.

Assembly of the Handle

1. Slide the Collar Assembly (21) onto the Handle (1).
2. Install the Muffler Body (7), large opening trailing, onto the inlet end of the Handle.
3. Position the two Muffler Elements (8) into the Muffler Body and then capture them by installing the Exhaust Deflector (6) against the Muffler Body.
4. **If the tool is to be used with the air supply entering the end of the Handle**, install the Inlet Bushing Seal (5) over the threads of the Inlet Bushing (3) and install it in the end of the Handle. Tighten the Bushing between 20 and 30 ft-lb (27 and 40 Nm) torque.
If the tool is to be used with the air supply entering the side of the Handle, install the Inlet Plug Seal (24) over the threads of the Inlet Plug (23) and install it in the end of the Handle. Tighten the Plug between 30 and 40 in-lb (3.4 and 4.5 Nm) torque.

MAINTENANCE SECTION

5. Push the Throttle Valve Guide (16), open end leading, into the recess at the motor end of the Handle. Rotate the Guide until the hole in the side of the Guide aligns with the opening for the Throttle Valve Plunger (12).
6. With the Valve Plunger Seal (13) installed in the annular groove in the Throttle Valve Plunger, slide the Plunger, large end trailing, into the non-slotted end of the Valve Plunger Bushing (14).
7. Install the Bushing Seal (14A) over the threads of the Bushing against the large head.
8. Apply Perma-Lok LH050* Pipe Sealant to the first two threads of the slotted end of the Bushing.
9. Using a screwdriver in the slot of the Bushing, thread the assembled Plunger and Bushing into the Handle until the trailing end of the Bushing is flush with the handle surface. Make certain the Plunger enters the hole in the Throttle Valve Guide. Make certain the Plunger is retracted against the Bushing before installing the Throttle Valve Spring (15).
10. Install the Throttle Valve Spring, large end leading, in the handle against the Throttle Valve Guide.
11. Install the Reverse Valve Washer (29) on the hub with the internal hex of the Throttle Body (19) and secure it by installing one of the Throttle Body Seals (20) in the annular groove ahead of it. Install the other Seal in the annular groove on the other side of the large hub.
12. Position the Throttle Valve Seat (18) and Throttle Valve (17) in the central opening of the Throttle Body opposite the internal hex and carefully slide the assembly into the motor end of the Handle.
13. Using a 5/16" hex wrench, tighten the Throttle Body between 30 and 40 in-lb (3.4 and 4.5 Nm) torque.
14. With the Collar Assembly toward the muffler end of the Handle, position the Throttle Lever (11) in the Handle with the rounded projection at one end of the Lever entering the corresponding rounded notch in the Handle. Depress the Lever and slide the Collar Assembly forward toward the motor end of the Handle to capture and retain the Lever.
15. **If the tool is to be used with the air supply entering the side of the Handle,** install the Inlet Bushing Seal over the threads of the Inlet Bushing and install it through the Collar and into the side of the Handle. Tighten the Bushing between 20 and 30 ft-lb (27 and 40 Nm) torque.
If the tool is to be used with the air supply entering the end of the Handle, install the Inlet Plug Seal over the threads of the Inlet Plug and install it through the Collar and into the side of the Handle. Tighten the Plug between 30 and 40 in-lb (3.4 and 4.5 Nm) torque.

Assembly of the Motor

1. Place the Rear End Plate (39), face with the kidney shaped slots leading, onto the unsplined hub of the Rotor (40). Position the Rear Rotor Bearing (38) on the same hub and press the Bearing onto the shaft against the Rear End Plate.
2. Install the Cylinder (42) over the Rotor so that the Cylinder Dowel (43) enters the hole in the Rear End Plate.
3. Apply a thin film of oil to each Vane (41) and insert a Vane into each of the rotor vane slots.
4. Place the Rotor Spacer (45) on the splined hub of the Rotor and install the Front End Plate (44) over the Spacer, counterbored end trailing, against the rotor face.
5. Press the flush ground Front Rotor Bearing (46), identifying marks toward the hex end of the Rotor, onto the hub and into the Front End Plate.

NOTICE

The Clutch Assembly must be assembled with the motor before attaching them to the Handle. If the Clutch is not assembled, set the motor aside and assemble the clutch as instructed in the section, ASSEMBLY OF THE CLUTCH.

Assembly of the Clutch

1. Install two Shutoff Balls (66) into each of the three holes located radially in the Cam Shaft (68) and then slide the assembly into the Cam Block (69). Fill the Cam Shaft with grease to retain the Balls.
2. Press the Clutch Bearing (72) onto the spindle end of the Clutch Shaft.
3. Install the Reset Spring (65), tapered end leading, onto the small hub of the Cam Shaft and insert the assembled parts, Spring first, into the central opening at the non-threaded end of the Clutch Shaft (56).
4. Apply pressure to the assembly to keep it in the Shaft and install the three Cam Pins (67) into the radial holes in the Clutch Shaft and into the slots of the Cam Shaft to capture the assembly.
5. Position the Clutch Spindle (70) in the bearing end of the Clutch Shaft and secure it by using a thin blade screwdriver to spiral the Spindle Retainer (71) into the groove inside the Clutch Shaft.
6. Apply grease to the three Clutch Balls (62) and install them in the holes in the Clutch Shaft near the large flange. Slide the Cam Follower (61), large end first, onto the threaded end of the Clutch Shaft and pull it forward to capture the Balls between the flange and the Follower.

MAINTENANCE SECTION

7. Slide the Clutch Spring (60) and the Clutch Adjusting Nut Lock (59), notched face trailing, onto the threaded end of the Clutch Shaft.
8. Secure the components by threading the Clutch Adjusting Nut (58), notched face leading, onto the Clutch Shaft. Insert a #1 Phillips head screwdriver into the notch of the Nut Lock and one of the notches in the Nut. Insert the screwdriver far enough to create a gap between the Nut Lock and Adjusting Nut. Turn the screwdriver clockwise as you would to tighten a screw to move the Nut along the Shaft until it clears the groove for the Clutch Adjusting Nut Stop (57).
9. Insert the jaws of snap ring pliers into the holes of the Clutch Adjusting Nut Stop and expand the Stop only enough to release any pressure against the Clutch Shaft. While keeping the pressure relieved, screw the assembled clutch onto the Stop, as you would screw a nut onto a bolt, until the Stop enters the groove. Expanding the Stop sufficiently to clear the Shaft in a normal manner will distort the snap ring beyond acceptable limits.
10. Install the Rear Motor Housing Seal (35), Front Motor Housing Seal (48) and Hole Cover O-ring (53) in the grooves in the Motor Housing (33).
11. Slide the Housing Sleeve Assembly (49), large end first, onto the Motor Housing. Slide the the Clutch Adjusting Hole Cover (52) onto the Motor Housing against the Sleeve Assembly.
12. Insert the assembled clutch, Spindle first, into the Clutch Housing (73).
13. Thread the assembled clutch and Housing onto the Motor Housing and tighten the joint between 20 and 25 ft-lb (27 and 35 Nm) torque.

Assembling the Motor to the Handle


1. Drop the Motor Clamp Washer (47), concave side first, into the motor bore of the Motor Housing (33).
2. Apply some grease to the Shutoff Spool (63) and Valve Return Spring (64). Install the Spring on the long stem of the Spool and insert the short stem of the assembly into the hole in the splined end of the Rotor (40).
3. Hold the Motor Housing horizontally and slide the assembled motor into the Housing. Make certain the rotor spline engages the internal spline of the Clutch Shaft (56).
4. Install the two Rotor Bearing Springs (37) in the recess of the Rear Rotor Bearing Housing (36) and place both in position against the Bearing. Make sure that the Cylinder Dowel (43) enters the dowel hole in the Bearing Housing.
5. Install the Motor Clamp Seal (32) on the small hub of the Motor Clamp Spacer (31).
6. Position the Spacer in the Housing, small hub leading, so that the slots of the Spacer engage the flat on the

Bearing Housing. While pushing the Spacer toward the motor, rotate the assembly until the alignment notch in the Spacer aligns with the pin in the Housing and the entire assembly moves forward.

NOTICE

It may be necessary to insert a wooden or metal block into the exposed notches of the Motor Clamp Spacer to rotate the assembly, if the assembled motor is a tight fit in the Motor Housing.

7. The distance between the large end of the Motor Housing and the top surface of the large flange of the Shutoff Valve Assembly is critical for efficient operation. The gap must be between .258" and .264" (6.55 mm and 6.70 mm) wide. (See Dwg. TPD1251). To determine if the gap is correct, insert the Shutoff Valve Assemby (30), shaft first, into the central opening of the motor assembly and measure the distance with a depth micrometer.

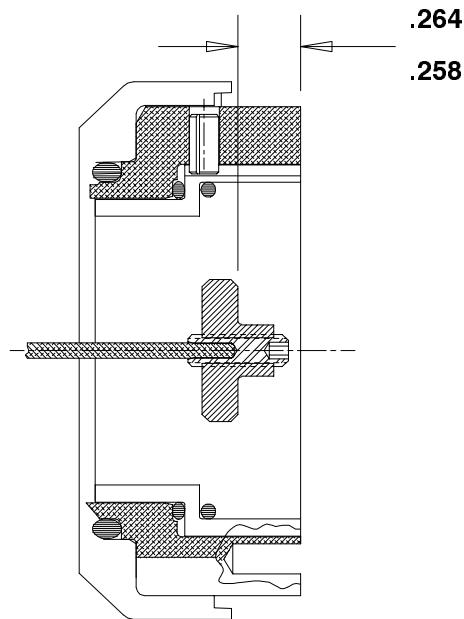

(Dwg. TPD1251)

If the gap is incorrect, proceed as follows:

- a. Remove the Valve Assembly from the motor.
- b. Place a wrench on the square of the valve.
- c. Insert a hex wrench into the end of the shaft and turn it clockwise to shorten the gap or counterclockwise to increase the gap.
- d. Install the Valve Assembly and again, measure the gap. Repeat the process until the distance is correct.
8. When the gap is correct, remove the Valve Assembly from the motor.
9. Install a Reverse Valve Seal (28) into the groove on the rear end of the Reverse Valve (27).

MAINTENANCE SECTION

10. Insert the shaft of the Shutoff Valve Assembly through the central opening of the Reverse Valve from the large open end.
11. Insert the Reverse Valve, large open end leading, with the Shutoff Valve Assembly into the Handle. The Seal will hold the parts in position against the Handle.
12. Install the remaining Reverse Valve Seal in the large opening of the Motor Clamp Spacer.
13. Insert the shaft of the Shutoff Valve Assembly into the central hole through the motor and position the assembled handle against the assembled motor.
14. Install the four Handle Mounting Screws (25) and Lock Washers (26) and tighten the Screws between 12 and 18 in-lb (1.4 and 2.0 Nm) torque.
15. Slide the Adjustable Grip (9) onto the Handle.
16. Spread the open end of the Adjustable Grip Latch (10) slightly and install it on the Handle to capture the Grip.
8. Using snap ring pliers, install the Gear Retainer (102) in the internal groove of the Gear Case.
9. Thread the Gear Case onto the Clutch Housing (73) and engage the teeth of the Clutch Spindle (70) with the teeth of the Drive Coupling or Rotor Pinion. It may be necessary to rotate the Spindle to mesh the teeth properly while threading the Gear Case onto the Clutch Housing. Tighten the joint between 20 and 25 ft-lb (27 and 34 Nm) torque.

Assembly of the Angle Attachment

1. Lubricate the Bevel Pinion (159) as instructed on Page 15 under **LUBRICATION** and insert it, gear end first, into the long bore of the Angle Housing (150).

NOTICE

The Bevel Gear and Bevel Pinion are specially matched sets. Some sets are color coded for manufacturing purposes only. Only the Gear and Pinion set furnished as a replacement part or the same Gear and Pinion set removed from one tool, is a matched set. A Bevel Gear from one tool used with a Bevel Pinion from another tool with the same color code IS NOT A MATCHED SET. Replace these parts only as a matched set. Failure to do so will result in unsatisfactory tool performance and damage to the Bevel Gear and Bevel Pinion.

2. Lubricate the Bevel Pinion Bearing (158) as instructed on Page 15 under **LUBRICATION** and insert it, unstamped end first, into the bore of the Angle Housing and onto the bevel pinion shaft.
3. For DAA2 Angle Attachments, use a cylinder that has a .573" (14.55 mm) I.D. and a .755" (19.18 mm) O.D. and is 1.411" (35.84 mm) long and press the Bevel Pinion Bearing so the stamped face is a maximum of 1.416" (35.96 mm), but not less than 1.406" (35.71 mm) below the end face of the Angle Housing. For DAA3 Angle Attachments, use a cylinder that has a .699" (17.75 mm) I.D. and a .965" (24.51 mm) O.D. and is 1.255" (31.88 mm) long and press the Bevel Pinion Bearing so the stamped face is a maximum of 1.26" (32.0 mm), but not less than 1.25" (31.75 mm) below the end face of the Angle Housing.
4. Install, in the order named, the Thrust Washer (157), Thrust Bearing (156) and Housing Orientation Ring (154) over the splined end of the Bevel Pinion and retain the components by installing the Orientation Ring Retainer (155) on the pinion shaft.

Assembly of the Gear Case


1. Install the Grease Shield Support (111), small edge trailing, onto the hub of the Gear Head Spindle (108). Use O-ring lubricant to hold it in place, install the Shield Support O-ring (112) on the Support.
2. Support the pin end of the Spindle on a steel rod long enough to keep the Gear Case (100) from contacting the table of an arbor press. Position the Gear Case, external thread upward, on the Spindle. Install the Grease Shield (113) in the Gear Case and press the Gear Case Bearing (114) onto the shaft of the Planet Gear Spindle. Press the Bearing until it enters the Gear Case and bottoms against the Shield Support.
3. Install a Spindle Planet Gear (109) and Spindle Planet Gear Bearing (110) on each shaft of the Spindle.
4. Work 3 to 4 cc of Ingersoll-Rand No. 67 Grease into the gear train.
5. For DAA9, DAA9-EU, DAA14, DAA15 and DAA15-EU models, install the Drive Coupling (103), gear teeth first, into the Gear Case. Make certain the gear teeth mesh with the teeth of the Planet Gears. For DAA25, DAA25-EU, DAA35, DAA35-EU, DAA40, DAA40-EU, DAA60 and DAA60-EU models, install the Planet Gear Head (105) into the Gear Case.
6. For DAA25, DAA25-EU, DAA35, DAA35-EU, DAA40, DAA40-EU, DAA60 and DAA60-EU models, install a Planet Gear (106) and Planet Gear Bearing (107) on each of the pins on the Planet Gear Head. Make certain the teeth on the shaft of the Gear Head mesh with the teeth of the Spindle Planet Gears.
7. For DAA25, DAA25-EU, DAA35, DAA35-EU, DAA40 and DAA40-EU models, install the Rotor Pinion (104) between the Planet Gears.

MAINTENANCE SECTION

5. If the Lower Spindle Bearing (163) has been removed, proceed as follows:
- For DAA2 Angle Attachments**, using a sleeve that will contact the inner ring of the Bearing, press the Bearing, sealed side first, onto the Spindle (164). For DAA3 Angle Attachments, using a sleeve that will contact the inner ring of the Bearing, press the Bearing onto the Spindle (164). Press on the stamped side of the Bearing with the side marked with red toward the spindle shoulder.
 - For DAA2 Angle Attachments**, slide the Bevel Gear (159) onto the Spindle. **For DAA3 Angle Attachments**, align the internal flats of the Bevel Gear (159) with the flats on the Spindle and press the Bevel Gear onto the Spindle.
 - For DAA2 Angle Attachment**, apply a drop of Perma-bond Surface Conditioner II * to the threads of the Bevel Gear Retainer (162) and Spindle and allow it to cure for five minutes. Apply Perma-Lok HF-138 * to the threads of the Bevel Gear Retainer and tighten it on the Spindle between 8 and 12 ft-lb (11 and 16 Nm) torque.

For DAA3 Angle Attachments, spread the Bevel Gear Retainer (162) and slip it over the end of the Spindle. Slide the Retainer down the Spindle and into the groove around the Spindle to retain the Bevel Gear.

6. If the Upper Spindle Bearing (152) has been removed, proceed as follows:
- For DAA2 Angle Attachments**, press on the closed end of a new Spindle Bearing entering the Bearing into the small bore opposite the threaded end of the Angle Head to the dimension shown in Dwg TPD680.

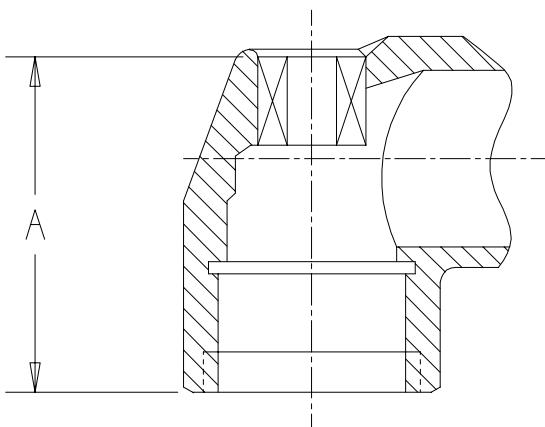

(Dwg. TPD680)


Minimum Dimension “A”	in mm	Maximum Dimension “A”	in mm
1.21 30.75		1.27 31.25	

For DAA3 Angle Attachments, press a new Spindle Bearing into the Angle Head from the large threaded end to the dimension shown in Dwg. TPD635.

NOTICE

Press on the stamped face of the Bearing. Failure to do so will cause damage to the Bearing.

Install a new Angle Housing Cap (153) into the top of the Angle Head.

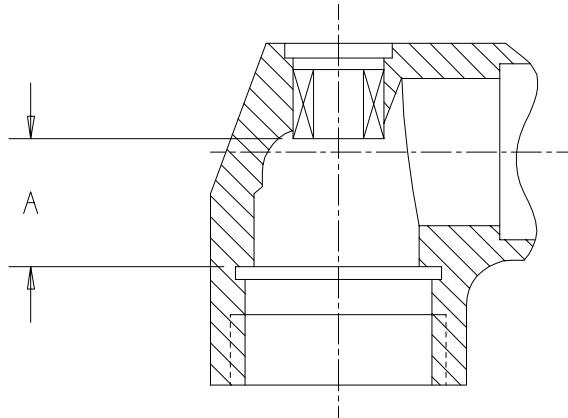

(Dwg. TPD636)

Minimum Dimension “A”	in mm	Maximum Dimension “A”	in mm
0.718 18.25		0.728 18.50	

- Lubricate the Upper Spindle Bearing, Bevel Gear and Lower Spindle Bearing and install the Spindle in the Angle Housing.
- Clean the threads on the Angle Housing and the Spindle Bearing Cap (170) and apply a film of Perma-Lok MM-115* to the threads.
- For DAA2 Angle Attachments**, install Spindle Seal (169). Using the Spindle Bearing Cap Wrench (171), install the Spindle Bearing Cap and tighten the Cap between 15 and 20 ft-lb (20 and 27 Nm) torque. **For DAA3 Angle Attachments**, using the Spindle Bearing Cap Wrench (171), install the Spindle Bearing Cap and tighten the Cap between 20 and 25 ft-lb (27 and 34 Nm) torque.
- If the Coupling Nut (160) was removed, slide the Coupling Nut, threaded end trailing, over the motor end of the Angle Housing. Apply the Coupling Nut Retainer (161) to the external groove on the motor end of the Angle Housing.
- Engage the spline on the Bevel Pinion with the matching internal spline of the Spindle Planet Gear Head (108) and thread the Coupling Nut onto the Gear Case (100). Orient the angle attachment to the desired position and tighten the Coupling Nut between 25 and 30 ft-lb (27 and 40 Nm) torque.

MAINTENANCE SECTION

TROUBLESHOOTING GUIDE

Trouble	Probable Cause	Solution
Low power or low free speed	Low air pressure at the inlet	Check air supply. for top performance, the air pressure must be 90 psig (6.2 bar/620 kPa) at the inlet.
	Plugged Inlet Bushing Screen	Clean the Inlet Bushing Screen in a clean, suitable, cleaning solution. If the Screen cannot be cleaned, replace it.
	Clogged Muffler	Clean the Muffler Elements in a clean, suitable, cleaning solution. If they cannot be cleaned, replace them.
	Worn or broken Vanes	Install a complete set of Vanes.
	Worn or broken Cylinder	Replace the Cylinder if it is cracked or if the bore appears wavy or scored.
	Improper lubrication or dirt buildup	Clean the Motor Unit parts and lubricate them as instructed on Page 25.
Leaky Throttle Valve	Worn Throttle Valve and/or Throttle Valve Seat	Install a new Throttle Valve and/or Throttle Valve Seat.
	Dirt accumulation on Throttle Valve and/or Throttle Valve Seat	Pour about 3 cc of a clean, suitable, cleaning solution into the air inlet and operate the tool for about 30 seconds. Immediately , pour 3 cc of light oil in the tool for 30 seconds to lubricate all the parts.
Tool fails to shut off	Dirty Shutoff Valve Assembly	Clean any dirt from the Shutoff Valve.
	Bent stem on Shutoff Valve	Straighten the stem of the Valve or replace the Valve.
	Valve out of adjustment	Adjust the Valve to get the required gap specified on Page 29.
Gear Case gets hot	Excessive grease	Clean and inspect the Gear Case and gearing parts. Lubricate as instructed on Page 25.
	Worn or damaged parts	Clean and inspect the Gear Case and gearing. Replace worn or broken components.
Angle Head gets hot	Excessive grease	Clean and inspect the Angle Head and gearing parts. Lubricate as instructed on Page 25.
	Inadequate grease	Inject 0.5 to 1.5 cc of grease into the Grease Fitting.
	Worn or damaged parts	Clean and inspect the Angle Head and gearing parts. If the Bevel Gear and/or Bevel Pinion is worn or broken, replace both parts as they are a matched set.

NOTICE

SAVE THESE INSTRUCTIONS. DO NOT DESTROY.