

Articulating Arms





APPLICATIONS:

WHENEVER IT IS NOT POSSIBLE TO INSTALL A RAIL SYSTEM DIRECTLY ABOVE A WORK AREA, AN ARTICULATING ARM IS A SOLUTION


ARTICULATING ARMS PROVIDE THE ABILITY TO REACH BEYOND THE RAIL SYSTEM TO PICK UP OR SET DOWN A LOAD.



700C Articulating Arm

Internal Pulleys to Prevent Wire Rope from Resting in Bottom of Arm

270° Articulation at Center Pivot

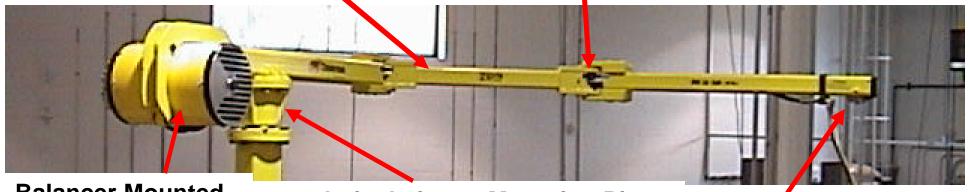

Balancer Mounted


360° Articulation at Mounting Pivot

Horizontally

End of Arm Pulley Provides Vertical Lift

- •Maximum Capacity 272Kg (500 lb.) with 3M (10 ft.) Reach
- •Carriage or Column Mounted; will install to most competitor rail

Assembly Solutions 713Articulating Arm

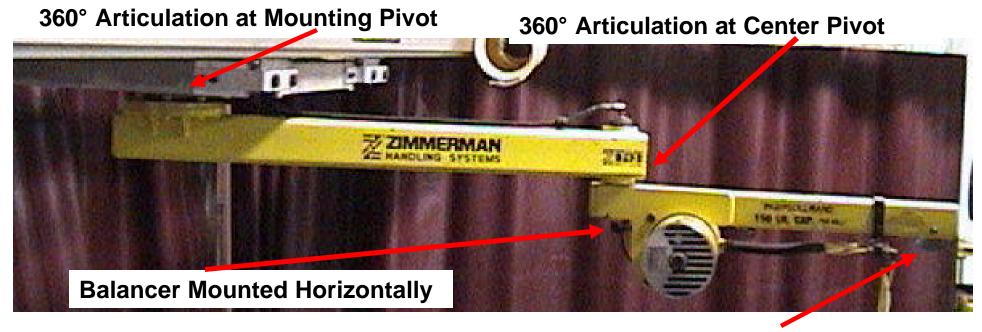


End of Arm Pulley Provides Vertical Lift

- •Maximum Capacity 272Kg (500 lb.) with 3M (10 ft.) Reach
- Carriage or Column Mounted; will install to most competitor rail




600 Articulating Arm

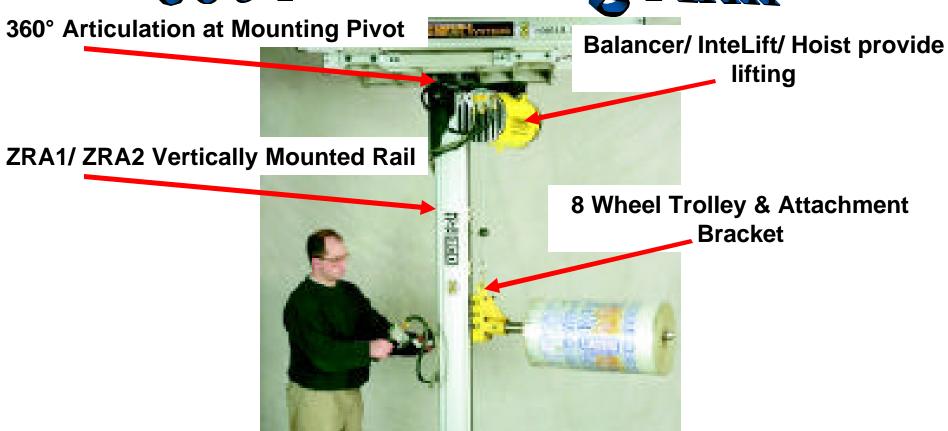

- •Maximum Capacity 454.5Kg (1000 lb.)
- Carriage or Column Mounted; will install to most competitor rail




Articulating Arm Layout

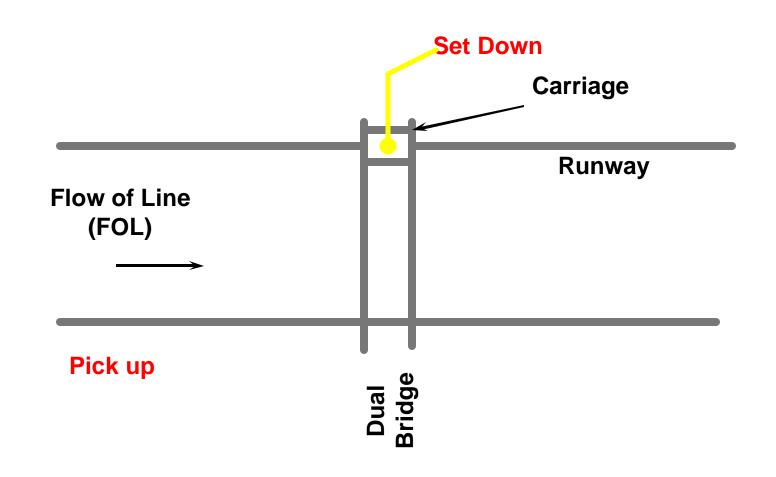




Standard
Configured
Products:

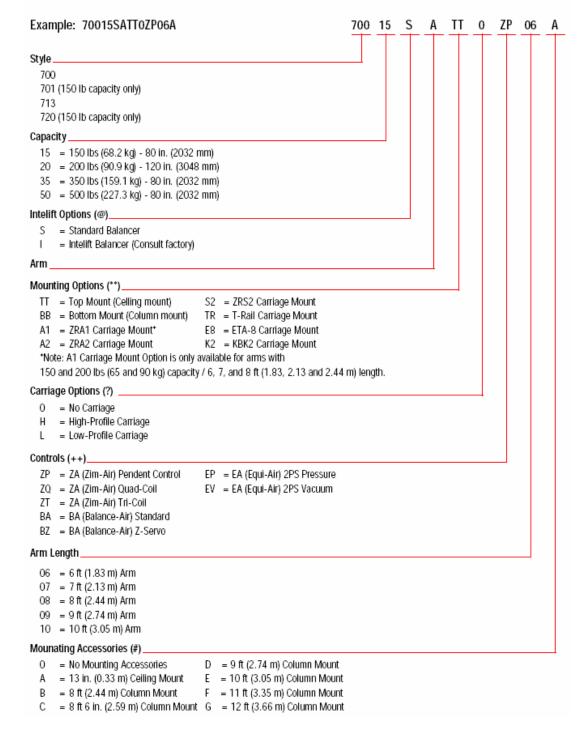




Standard
Configured
Products:

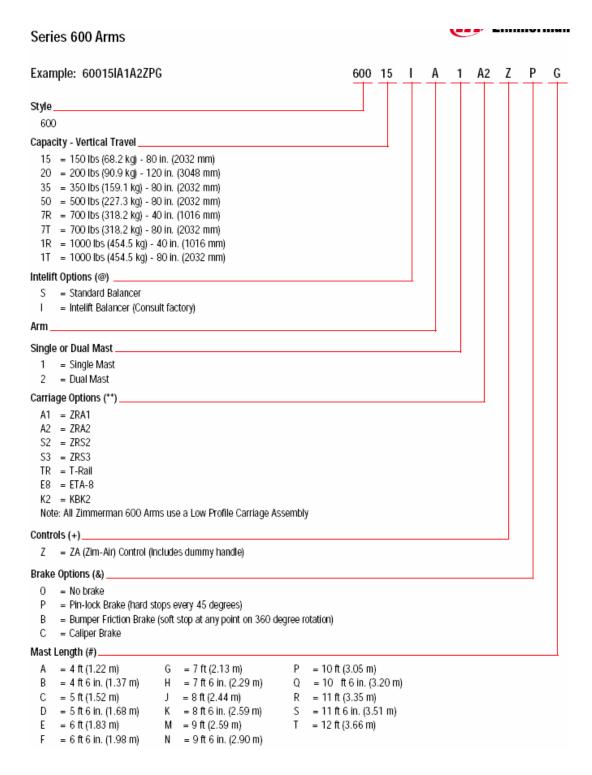



Attelating Am & Wire Rope Wear

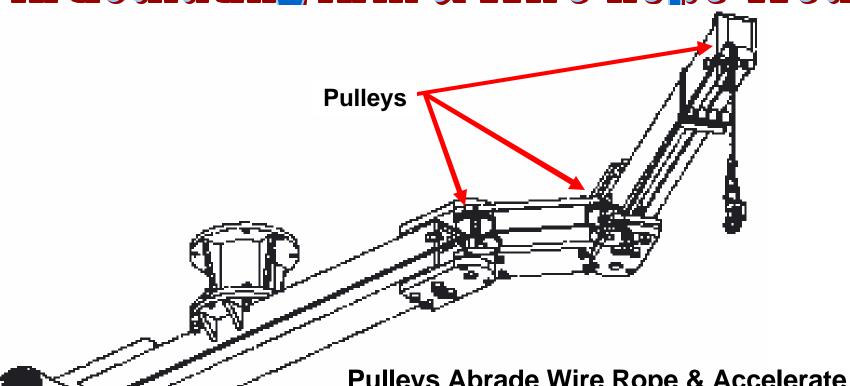

Pulleys Abrade Wire Rope & Accelerate Wear- INSPECT DAILY- Preventive Maintenance Schedule in Service Manual MHD56162



Wire Rope Replacement- 700 & 713

Lower the Load to the Full Down Position- Remove Air Supply- Remove Load from Hook

Remove Upper Balancer Mount Bolt



Cut Wire Rope at Balancer- Install new wire rope to reel- Butt Splice New Rope to Old Rope- At End of Arm Pulley Pull Old Wire Rope Out to Feed New Wire Rope through Pulleys

Reinstall Balancer- Turn on Air Supply- Keep Tension on Wire Rope while moving with no load on hook



➤ Provides Reach Beyond Normal Rail System

≻Carriage or Column Mounting

>272 Kg (500lb) Capacity- 700/ 713 Series

>454.5 Kg (1000lb) Capacity- 600 Series