



Form Z343
Date 1-98/A

INSTRUCTIONS FOR INSTALLATION OF BEARING AND SPACER ASSEMBLIES 63234 AND 65860

Spacer is assembled on the open side of bearing.
Bearing is assembled with open side facing the inside of the angle head housing.
Refer to parts list for order of assembly.

**SIoux
TOOLS INC.**

250 SNAP-ON DRIVE ■ PO BOX 1596 ■ MURPHY, NC 28906 ■ USA ■

Printed In U.S.A.



Form Z343
Date 1-98/A

INSTRUCTIONS FOR INSTALLATION OF BEARING AND SPACER ASSEMBLIES 63234 AND 65860

Spacer is assembled on the open side of bearing.
Bearing is assembled with open side facing the inside of the angle head housing.
Refer to parts list for order of assembly.

**SIoux
TOOLS INC.**

250 SNAP-ON DRIVE ■ PO BOX 1596 ■ MURPHY, NC 28906 ■ USA ■

Printed In U.S.A.



Form Z343
Date 1-98/A

INSTRUCTIONS FOR INSTALLATION OF BEARING AND SPACER ASSEMBLIES 63234 AND 65860

Spacer is assembled on the open side of bearing.
Bearing is assembled with open side facing the inside of the angle head housing.
Refer to parts list for order of assembly.

**SIoux
TOOLS INC.**

250 SNAP-ON DRIVE ■ PO BOX 1596 ■ MURPHY, NC 28906 ■ USA ■

Printed In U.S.A.