


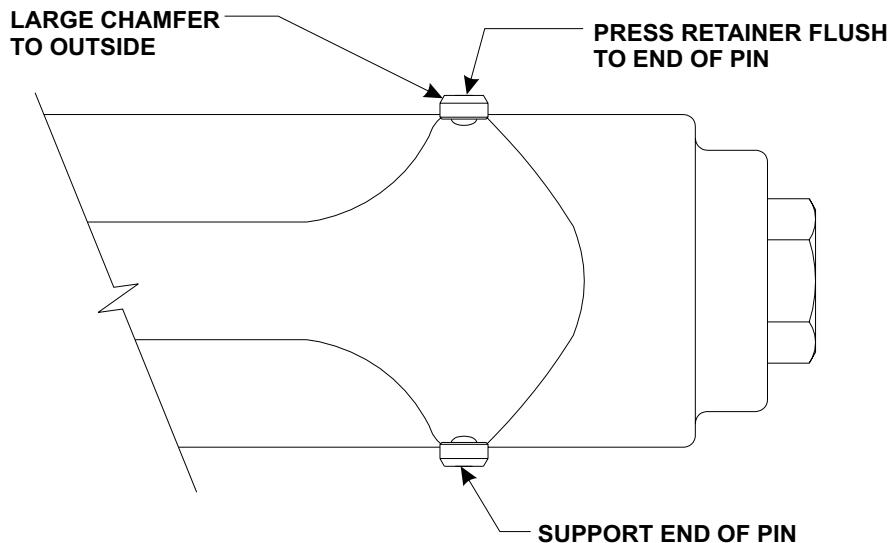

## INSTRUCTIONS FOR INSTALLING 66344 PIN ASSEMBLY

Slip pin (with one retainer installed to the pin end) thru lever and housing. If pin fits tight in the housing, drill thru housing with 1/8" drill to size hole. Press retainer onto pin and flush to the end of the pin. Support opposite end of pin of a flat surface when pressing so both retainers end up flush with the pin ends. It is recommended to press the retainer rather than hammer it on. Note: The larger chamfered end of the retainer is to the outside.



**SIOUX**  
**TOOLS INC.**

2901 FLOYD BOULEVARD ■ PO BOX 507 ■ SIOUX CITY, IOWA 51102-0507 ■

Printed In U.S.A.