



INSTRUCTIONS ON GOVERNORS



Lubricate all moving parts. Place a generous amount of grease around the moveable weights and in the roll pin holes. Oil the spring and the stem inside the spring.

In assembly do not over tighten and crack the governor frame. Check speed of grinder with tachometer.

Tightening up the spring speeds up the tool. Loosening the spring slows down the tool.

**CAUTION: DO NOT OPERATE TOOL ABOVE SPEED
SHOWN ON WHEEL USED!!!**

SIoux TOOLS INC.
Sioux City, Iowa U.S.A. 51102