INSTALLATION INSTRUCTIONS FOR FABRIC CHAIN CONTAINER KITS
CE120-K749-17 and CE120-K749-45
FOR USE ON CA110, CA120, CE110 and CE120 CENTURION® HOISTS

WARNING

DISCONNECT THE HOIST FROM THE POWER SUPPLY BEFORE INSTALLING A CHAIN CONTAINER KIT.
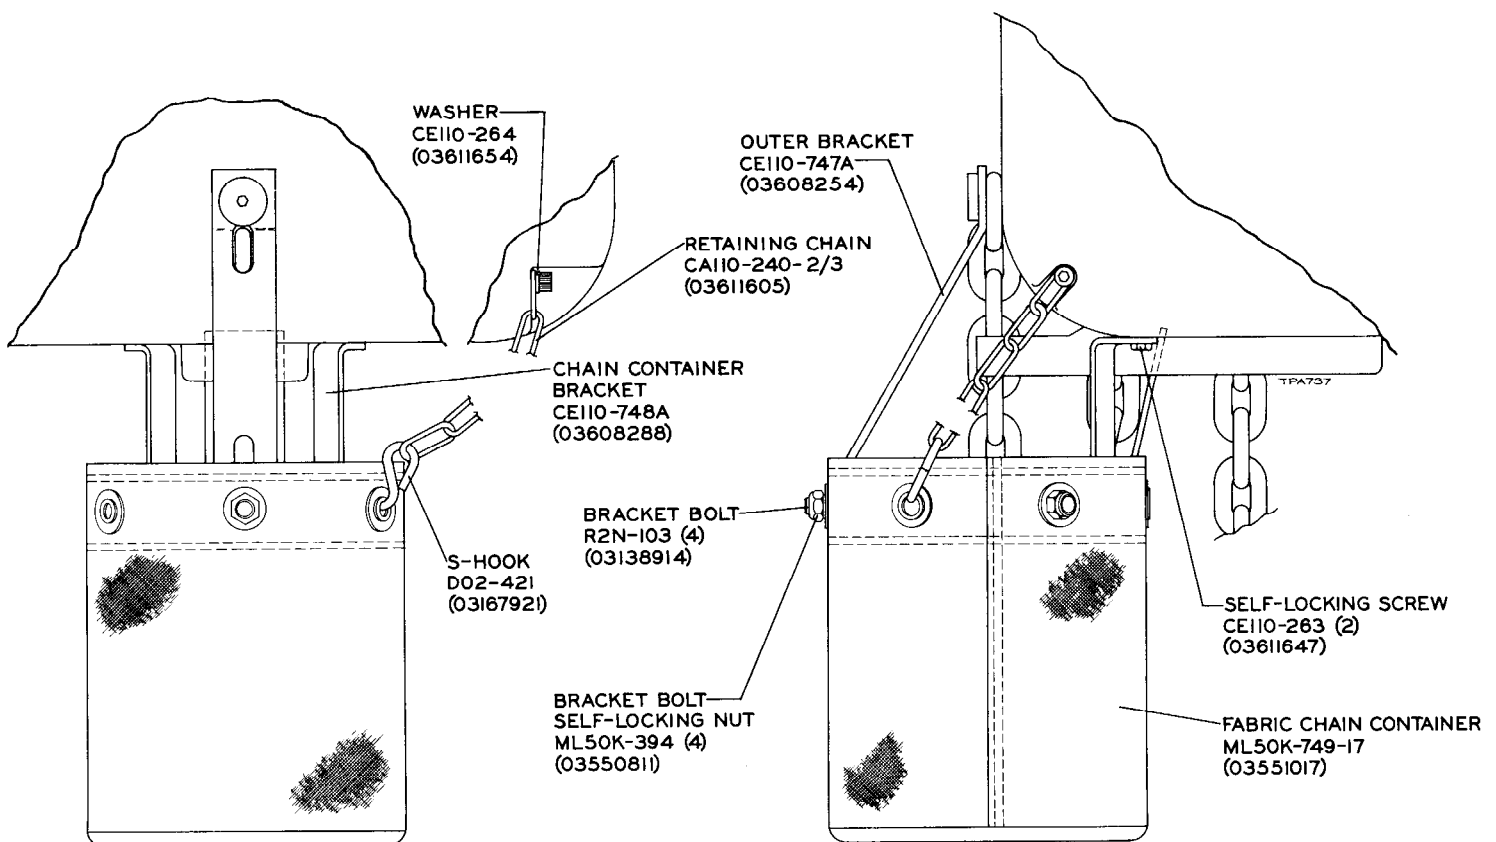
NEVER USE A CHAIN CONTAINER WITHOUT THE RETAINING CHAIN.

ALWAYS USE SELF-LOCKING STOP NUTS TO SECURE THE BOLTS REQUIRED.

CE120-K749-17 Kits are for use with CA110 or CE110 Single Line Hoists having up to a 17 foot lift, or with CA120 or CE120 Double Line Hoists having up to a 9 foot lift.

CE120-K749-45 Kits are for use with CA110 or CE110 Single Line Hoists having up to a 45 foot lift, or with CA120 or CE120 Double Line Hoists having up to a 23 foot lift.

Attach the CE110-747A Outer Bracket under the Dead End Screw and the CE110-748A Chain Container Bracket to the bottom of the Hoist with the two CE110-263 Self-locking Screws. Attach the Chain Container with the four R2N-103 Bracket Bolts and ML50K-394 Self-locking Nuts.

Secure one end of the Retaining Chain under the lower Brake Cover Screw and attach the other end to the Container with the D02-421 S-Hook. Crimp the S-Hook into the grommet on the Chain Container as shown.

WASHER CE110-264 (03611654)

OUTER BRACKET CE110-747A (03608254)

RETAINING CHAIN CA110-240-2/3 (03611605)

CHAIN CONTAINER BRACKET CE110-748A (03608288)

BRACKET BOLT R2N-103 (4) (03138914)

S-HOOK D02-421 (03167921)

SELF-LOCKING SCREW CE110-263 (2) (03611647)

BRACKET BOLT SELF-LOCKING NUT ML50K-394 (4) (03550811)

FABRIC CHAIN CONTAINER ML50K-749-17 (03551017)

Fabric Chain Container for Centurion Hoists

Ingersoll-Rand®