US-LT40-03C[P] ANGLE SCREWDRIVER

EXPLODED VIEW

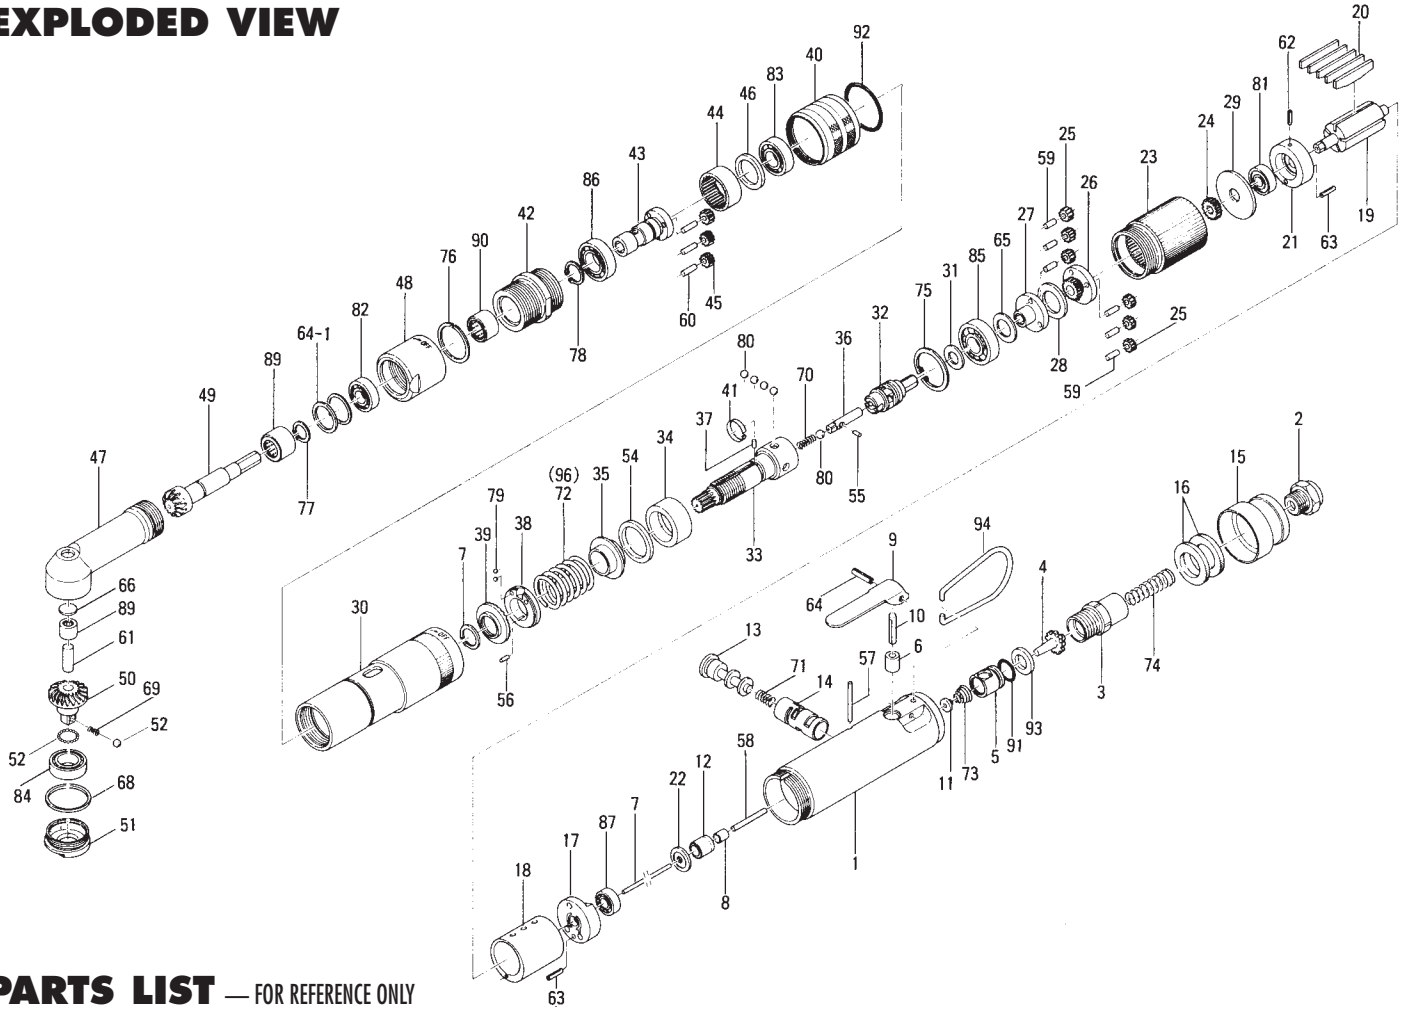

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.
1	461-025-6	Casing	1
2	480-091-8	Air Inlet Bushing	1
3	461-097-6	Air Inlet Bushing Connector	1
4	259-100-0	Valve	1
5	461-102-6	Valve Bushing	1
6	553-103-1	Valve Rod Bushing	1
7	463-104-7	Valve Rod	1
8	444-106-8	Valve Rod Cap	1
9	700-107-1	Valve Lever	1
10	461-114-6	Valve Pin	1
11	259-254-0	Shot-Off Valve	1
12	461-567-6	Bushing	1
13	893-057-1	Reverse Valve	1
14	472-211-7	Reverse Valve Bushing	1
1 5	472-782-7	Exhaust Deflector	1
16	472-835-7	Filter	2
17	472-285-7	Rear Plate	1
18	472-286-7	Cylinder	1
19	472-287-7	Rotor	1
20	472-288-0	Rotor Blade (PC)	5
21	472-289-7	Front Plate	1
22	461-291-6	Rear Plate Spacer	1
23	472-029-7	Gear Casing	1
24	472-460-5	Rotor Gear	1
25	472-470-5	Planet Gear	6
26	472-480-5	First Gear Cage	1
27	472-485-5	Second Gear Cage	1
28	496-483-1	Gear Cage Spacer	1
29	472-807-7	Spacer	1
30	461-369-7	Clutch Casing	1
31	461-344-6	Cam Retainer	1
32	472-346-5	Cam	1
33	461-654-7	Cam Guide	1

Index Number	Part Number	Description	Qty.
34	472-375-7	Cam Ring	1
35	472-379-8	Retainer	1
36	471-318-5	Pilot Pin	1
37	471-764-7	Notch Pin	1
38	472-562-8	Spring Holder	1
39	472-257-8	Regulating Screw	1
40	472-370-7	Clutch Casing Sleeve	1
41	471-670-7	Band	1
42	461-082-8	Connecting Screw	1
43	462-319-9	Anvil	1
44	462-466-9	Second Internal Gear	1
45	462-471-9	Second Planet Gear	3
46	462-487-9	Second Gear Cage Spacer	1
47	461-441-8	Angle Casing	1
48	469-081-6	Locking Nut	1
49	461-420-8	Driving Gear	1
50	461-430-8	Driven Gear (P)	1
51	461-488-7	Angle Head Casing Cover	1
52	981-002-0	Ball (1/8)	1
54	944-019-0	Back-up Ring (P19)	1
55	969-470-0	Pin (E) (2 x 8)	1
56	970-092-0	Pin (H) (2 x 5.5)	1
57	970-105-0	Pin (H) (2 x 24)	1
58	970-108-0	Pin (H) (2 x 26.8A)	1
59	972-089-0	Roller Pin (3 x8)	6
60	972-090-0	Roller Pin (3 x 10)	3
61	972-216-0	Roller Pin (6 x 16)	1
62	973-006-0	Roll Pin (2 x 6)	1
63	973-010-0	Roll Pin (2 x 10)	2
64	973-118-0	Roll Pin (3 x 18)	1
64-1	975-113-0	Spacer (19 x 15 x 1.5)	1
65	975-106-0	Spacer (18.5 x 11 x 1)	1
66	975-593-0	Round Plate (10 x 1)	1

Index Number	Part Number	Description	Qty.
67	975-768-0	Adjusting Spacer (19 x 16.2 x T)	1
68	975-787-0	Adjusting Spacer (26 x 24 x T)	1
69	976-346-0	Spring (2.9 x 6.35) (0.45)	1
70	976-058-0	Spring (4.5 x 11)	1
71	976-147-0	Spring (7 x 12)	1
72	976-516-0	Spring (Standard-Red)	1
73	977-071-0	Cone Spring (5.5 x 11 .5 x 15)	1
74	977-155-0	Cone Spring (7 x 10 x 35)	1
75	979-326-0	Inner Snap Ring (IRTW-26)	1
76	979-190-0	Outer Snap Ring (22)	1
77	979-351-0	Inner Snap Ring (ISTW-10)	1
78	979-353-0	Inner Snap Ring (ISTW-12)	2
79	981-001-0	Ball (3/32)	2
80	981-004-0	Ball (3/16)	5
81	982-063-0	Ball Bearing (606ZZ)	1
82	982-035-0	Ball Bearing (698)	1
83	982-100-0	Ball Bearing (6000)	1
84	982-870-0	Ball Bearing (6801)	1
85	982-901-0	Ball Bearing (6900)	1
86	982-902-0	Ball Bearing (6901)	1
87	987-039-0	Miniature Ball Bearing (R1560ZZ)	1
88	988-008-0	Needle Roller Bearing (NK 10/12)	1
89	988-380-0	Needle Roller Bearing (F68)	1
90	988-394-0	Needle Roller Bearing (FJ-1210)	1
91	990-911-0	O-Ring (SNS-12)	1
92	990-923-0	O-Ring (SNS-26)	1
93	996-424-0	Packing (16 x 9 x 2)	1
94	010-790-1	Suspension Ring	1

ACCESSORIES

96	976-517-0	Spring (Weak: Yellow)	1
97	939-402-0	Screwdriver	1

FOOTNOTES

AIMCO also offers a complete line of standard & special adapters, bits, sockets and extensions.

When ordering spare parts, please specify tool type, part number and description.

AIMCO

10000 SE PINE, PORTLAND, OR 97216
503-254-6600 FAX 503-255-2615

REVISED 3/00