


UX-1000S & UX-1000C OIL-PULSE TOOLS

EXPLODED VIEW

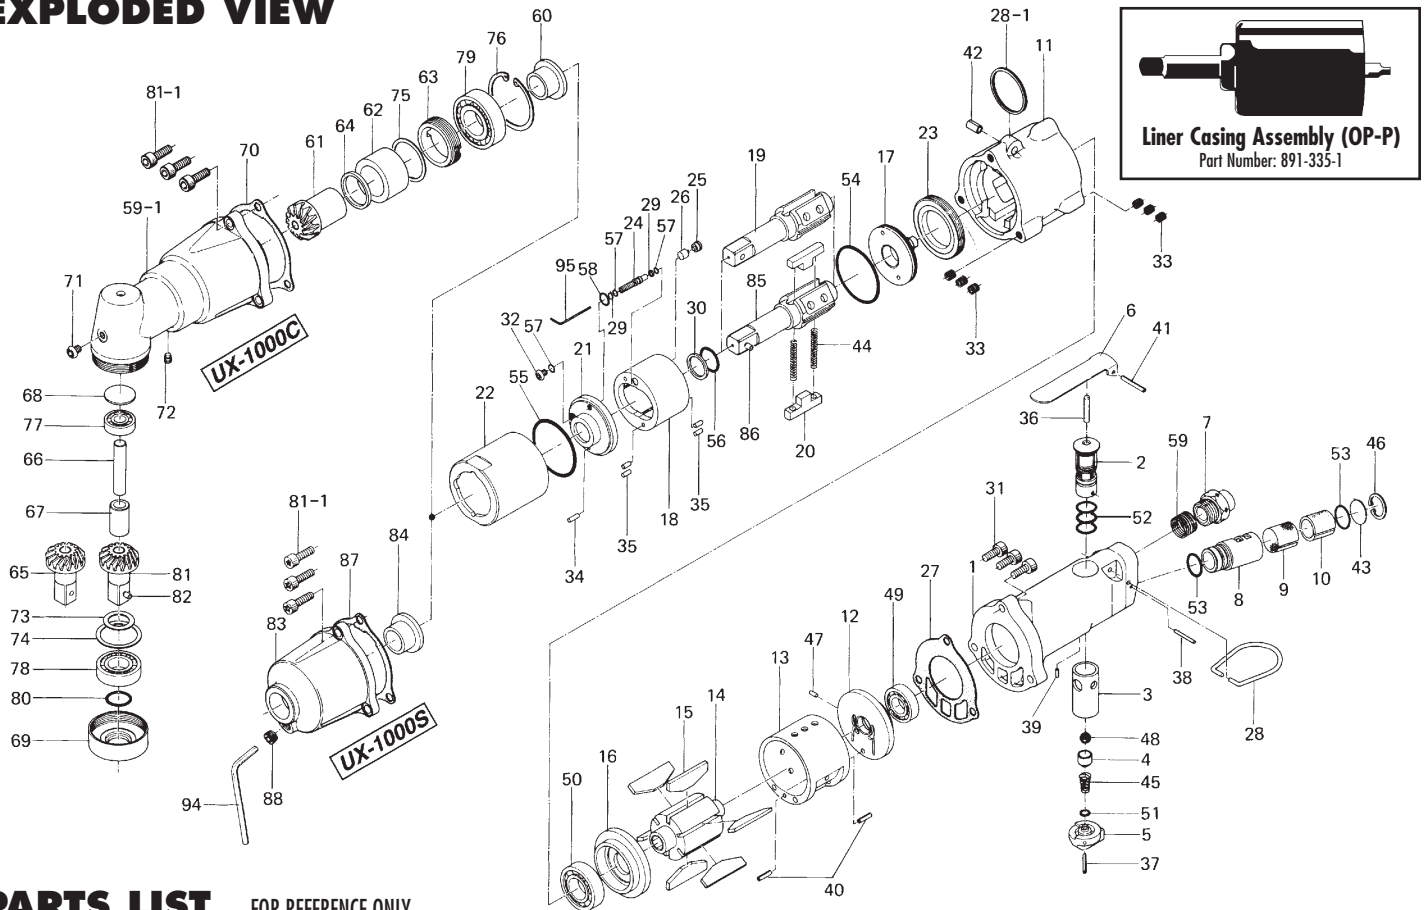

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
1	180-011-8	Handle	1	33	965-021-0	Heli-Sert (M6 x 1.5D)	1	65	033-430-1	Driving Gear (OP-O)	1 ■
2	180-210-7	Reverse Valve	1	34	969-450-0	Pin (G) (3 x 8)	1	66	033-431-1	Driven Gear Spindle	1 ■
3	180-211-7	Reverse Valve Bushing	1	35	970-206-0	Pin (H) (3 x 8)	4	67	033-432-1	Driven Gear Collar	1 ■
4	188-100-1	Valve	1	36	970-326-0	Pin (H) (4 x 25)	1	68	568-391-1	Spindle Gear Cover	1 ■
5	180-212-7	Reverse Lever	1	37	971-122-0	Pin (2 x 22)	1	69	199-488-7	Angle Casing Cover	1 ■
6	500-107-1	Valve Lever	1	38	971-163-0	Pin (2.5 x 23)	1	70	180-867-8	Front Casing Packing	1 ■
7	180-091-6	Air Inlet Bushing	1	39	973-006-0	Roll Pin (2 x 6)	1	71	945-949-0	Hexagon Round Head Bolt (M5 x 6)	1 ■
8	194-780-4	Exhaust Stack	1	40	973-110-0	Roll Pin (3 x 10)	2	72	954-206-0	Allen Head Cone Point Screw (M5 x 6)	1 ■
9	194-042-4	Silencer	1	41	973-124-0	Roll Pin (3 x 24)	1	73	975-790-0	Adjusting Spacer (22 x 15 x T)	1 ■
10	194-835-4	Filter	1	42	973-340-0	Roll Pin (6 x 10)	1	74	975-818-0	Adjusting Spacer (32 x 26 x T)	1 ■
11	180-025-8	Casing	1	43	975-598-0	Round Plate (18 x 1)	1	75	975-825-0	Adjusting Spacer (33.5 x 29 x T)	1 ■
12	041-285-7	Rear Plate	1	44	976-453-0	Spring (4.5 x 34.5 x 0.55)	2	76	979-035-0	Inner Snap Ring (42)	1 ■
13	188-286-9	Cylinder	1	45	977-103-0	Cone Spring (6 x 9.5 x 16)	1	77	982-015-0	Ball Bearing (608)	1 ■
14	194-287-4	Rotor	1	46	979-318-0	Inner Snap Ring (IRTW-18)	1	78	982-102-0	Ball Bearing (6002)	1 ■
15	175-288-9	Blade (PC)	6	47	980-008-0	Round Head Notch (2.4)	1	79	982-173-0	Ball Bearing (6004ZZ)	1 ■
16	194-289-4	Front Plate	1	48	981-208-0	Ball (5/16) Black	1	80	990-913-0	O-Ring (SNS-15)	1 ■
17	194-901-4	Rear Liner Plate	1	49	982-403-0	Ball Bearing (EE-4)	1	81	891-347-1	Driven Gear (OP-P)	1 ■
18	194-902-4	Liner	1	50	982-951-0	Ball Bearing (16003)	1	81-1	945-216-0	Allen Head Bolt (M6 x 16)	1 ■
19	194-319-4	Anvil (OP-O)	1	51	990-005-0	O-Ring (P7)	1	82	891-304-1	Socket Retainer Pin Assembly	1 ■
20	194-440-4	Driving Blade	2	52	990-909-0	O-Ring (SNS-11.2)	3	83	180-439-8	Front Casing	1 ○
21	194-904-4	Front Liner Plate	1	53	990-914-0	O-Ring (SNS-16)	2	84	189-328-8	Anvil Bushing	1 ○
22	194-905-4	Liner Casing	1	54	990-930-0	O-Ring (SNS-40)	1	85	891-312-1	Anvil (OP-P)	1 ○
23	194-906-4	Liner Casing Cover	1	55	990-932-0	O-Ring (SNS-42)	1	86	891-304-1	Socket Retainer Pin Assembly	1 ○
24	194-907-4	Relief Valve Spindle	1	56	990-156-0	O-Ring (P16) NTN	1	87	180-867-8	Front Casing Packing	1 ○
25	194-969-4	Relief Valve Cover	1	57	990-971-0	O-Ring (SNS-3)	3	88	966-100-0	Allen Head Plug (1/8)	1 ○
26	195-970-3	Relief Valve	1	58	990-974-0	O-Ring (SNS-6)	1				
27	180-851-8	Handle Packing	1	59	965-071-0	Heli-Sert (UNF5/8 x 1D)	1				
28	191-790-1	Suspension Ring	1	59-1	179-441-8	Angle Casing	1				
28-1	010-790-1	Suspension Ring	1	60	179-380-8	Bearing Holder Bushing	1 ■				
29	944-003-0	Supporter Ring (3 x 5 x 1)	2	61	199-420-7	Driving Gear	1 ■				
30	944-215-0	Supporter Ring (16 x 19.9 x 1.5)	1	62	199-421-7	Driving Gear Bushing	1 ■				
31	945-218-0	Allen Head Bolt (M6 x 18)	3	63	199-422-7	Driving Gear Bushing Screw	1 ■				
32	945-942-0	Hexagon round Head Bolt (M4 x 6)	1	64	199-425-7	Driving Gear Spacer	1 ■				

ACCESSORIES

94	939-104-0	Allen Wrench (5)	1
95	939-109-0	Allen Wrench (2)	1

FOOTNOTES

- = Parts for UX-1000C
- = Parts for UX-1000S

AIMCO also offers a complete line of standard & special adapters, bits, sockets and extensions.



When ordering spare parts, please specify tool type, part number and description.

10000 SE PINE, PORTLAND, OR 97216
503-254-6600 FAX 503-255-2615